

# **User Manual**

# **Energy Storage System**

PowerStack-ST510CS-4H



# **All Rights Reserved**

#### **All Rights Reserved**

No part of this document can be reproduced in any form or by any means without the prior written permission of Sungrow Power Supply Co., Ltd (hereinafter "SUNGROW").

#### **Trademarks**

**SUNGROW** and other SUNGROW trademarks used in this manual are owned by SUNGROW.

All other trademarks or registered trademarks mentioned in this manual are owned by their respective owners.

#### **Software Licenses**

- It is prohibited to use data contained in firmware or software developed by SUNGROW, in part or in full, for commercial purposes by any means.
- It is prohibited to perform reverse engineering, cracking, or any other operations that compromise the original program design of the software developed by SUNGROW.

# **About This Manual**

This manual gives an introduction to the transport and storage, mounting, electrical connection, powering on/off, troubleshooting, and maintenance of the Energy Storage System ("ESS").

#### **Target Group**

This manual is intended for operators of the energy storage plant and qualified technical persons. The installation and operation must be performed only by qualified technical persons, who must:

- Have received professional training
- Have read through this manual carefully and have a good understanding of the relevant safety instructions
- Be familiar with applicable local standards and the relevant safety code for electrical system

#### **How to Use This Manual**

Read the manual and other related documents before performing any operation on the product. Documents must be properly kept and be available at all times.

To increase customer satisfaction, the product and its manual will be updated and improved constantly. If the manual you have received is slightly inconsistent with the real product, it is probably owed to a product update. In such a case, the real product should take precedence. You can find the latest manual at **support.sungrowpower.com**, or reach your sales for the manual.

The figures in this manual are for reference only. The real product may differ.

#### Symbols in the Manual

To ensure the safety of life and property for users when using the product and to improve the efficiency of product use, the manual provides relevant safety information, which are highlighted by the following symbols.

Symbols that may appear in this manual are listed below. Please read carefully for better use of this manual.

#### A DANGER

Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

#### **▲** WARNING

Indicates a moderately hazardous situation which, if not avoided, will result in death or serious injury.

## **A** CAUTION

Indicates a slightly hazardous situation which, if not avoided, may result in minor or moderate injury.

#### NOTICE

Indicates a potential hazard which, if not avoided, will result in device malfunction or property damage.



Indicates supplementary information, emphasis on specific points, or tips related to the use of the product that might help to solve your problems or save your time.

#### Signs on the Product

Observe the safety signs on the product at all times, which include:

Sign	Explanation	
	Hot surface! Do not touch. Otherwise, it may cause personal injuries.	
$\triangle$	Disconnect the equipment from all the external power sources before maintenance!	
4	High voltages inside! Touching it may result in an electric shock.	
A C Smin	Danger of death due to high voltages!  After the equipment is disconnected from the external power source, wait at least 5 minutes before touching any of its internal conductive parts.	
	Beware of heavy weights! Lifting the heavy object directly may cause back injury. Please lift it with the assistance of proper tools.	
	Beware of explosion.	
	Beware of corrosion.	
	Do not dispose of it together with household waste.	
	No fires.	

Sign	Explanation	
	A medical facility should be set up nearby.	
<b>*</b>	If it gets in your eyes, flush your eyes immediately with running water or saline, and seek medical advice in time.	
	Protective earthing (PE) terminal. This terminal should be connected for reliable grounding, to ensure the safety of the operator.	
i	Read the instructions before performing any operation on the product.	
	Wear safety goggles.	

#### **Related Manuals**

Related manuals and acquisition methods for this product are shown in the table below.

Link	QR code
LC300 User Manual	
BSC300 User Manual	

# 目录

All Rights Reserved	
About This Manual	II
1 Safety Precautions	1
1.1 Personnel Requirements	1
1.2 Electrical Safety	1
1.3 Battery Safety	2
1.4 Hoisting and Transportation	4
1.5 Installation and Wiring	4
1.6 Operation and Maintenance	5
1.7 Product Disposal	6
2 Product Description	7
2.1 Product Overview	7
2.2 External Design	8
2.2.1 ESS External Design	8
2.2.2 Mechanical Data	10
2.2.3 Ventilation Design	11
2.3 Internal Design	12
2.3.1 Internal Components	12
2.3.2 DC/AC Power Converter Unit (SC125CX)	13
2.3.3 Power Distribution Box	16
2.3.4 Battery	17
2.4 EMS (Optional)	20
3 Transport and Storage	22
3.1 Precautions	22
3.2 Transport Methods	22
3.3 Transport Requirements	22
3.4 Storage Requirements	23
4 Mechanical Installation	25
4.1 Inspection Before Installation	25
4.1.1 Deliverables Inspection	25
4.1.2 Equipment Inspection	
4.2 Installation Environment Requirements	
4.2.1 Installation Site Requirement	26

	4.2.2 Foundation Requirements	.26
	4.2.3 Installation Space Requirements	27
	4.3 Handling with Forklift	31
	4.4 Hoisting and Transport	.32
	4.4.1 Precautions	33
	4.4.2 Hoisting Operation	35
	4.4.3 Hoisting Procedure	.35
	4.5 Securing ESS	36
	4.6 Removing Films	.37
5 El	ectrical Connection	.39
	5.1 Precautions	.39
	5.2 Electrical Connection Overview	.39
	5.3 Preparation Before Wiring	41
	5.3.1 Preparing Installation Tools	.41
	5.3.2 Opening Cabinet Door	42
	5.3.3 Prepare Cables	42
	5.3.4 Copper Wire Connection	.44
	5.3.5 Aluminum Wire Connection	.45
	5.3.6 Cable Inlet Design	.46
	5.4 Ground Connection	
	5.5 AC Connection	.48
	5.5.1 Safety Precautions	.48
	5.5.2 AC Output Wiring	49
	5.6 Auxiliary Power Supply Wiring	.50
	5.7 Communication Wiring	.51
	5.7.1 Ethernet Communication Wiring	51
	5.7.2 EMS/LC Communication Wiring	.52
	5.8 Post-wiring Operation	54
6 Ba	attery Connection	. 55
	6.1 Precautions	.55
	6.2 Cable Connection	56
7 P	owering up and Shutdown	.60
	7.1 Powering up	.60
	7.1.1 Inspection Before Powering up	60
	7.1.2 Power-on Procedure	60
	7.2 Shutdown	.61
	7.2.1 Planned Shutdown	.61
	7.2.2 Emergency Shutdown	62

8 Fire Suppression	63
8.1 General Rules	63
8.2 Fire Suppression System	63
8.3 Detection and Alarm System	64
8.4 Fire Extinguishing System	65
8.5 Backup Protection System (Optional)	66
9 Troubleshooting	68
10 Routine Maintenance	69
10.1 Precautions Before Maintenance	69
10.2 Container Maintenance	69
10.2.1 Appearance Repair	69
10.2.1.1 Detergent Cleaning	70
10.2.1.2 Finish Paint Repair	71
10.2.1.3 Double-Layer Paint Repair	73
10.2.2 Checking Door Locks and Hinges	76
10.2.3 Checking Sealing Strips	76
10.3 Battery Maintenance	76
10.3.1 Maintenance Precautions	76
10.3.2 Maintenance	78
10.4 Coolant Replacement	80
10.5 Post-maintenance Inspection	82
11 Appendix	83
11.1 System Parameters	83
11.2 Abbreviations	84
11.3 Tightening Torques	85
11.4 Quality Assurance	86
11.5 Contact Information	86

# 1 Safety Precautions

## 1.1 Personnel Requirements

The hoisting, transportation, installation, wiring, operation, and maintenance of the equipment must be carried out by qualified electrical technicians in accordance with local regulations. Qualified technicians must:

- Have certain electrical wiring, electronic, and mechanical expertise, and be familiar with electrical and mechanical schematics.
- Be familiar with the composition and working principles of the equipment and its upstream and downstream equipment.
- Have received professional training in the installation and commissioning of electrical equipment.
- Be able to respond quickly and effectively to dangers or emergencies that may occur during the process of installation and commissioning.
- Be familiar with applicable local standards and specifications of the country/region where the project is located.

# 1.2 Electrical Safety

#### **A** DANGER

- Touching the power grid or the contact points and terminals in the devices connected to the power grid may lead to electric shock!
- The battery side or the power grid side may generate voltage. Always use a standard voltmeter to ensure that there is no voltage before touching.

#### **A** DANGER

- · Lethal voltages are present inside the product!
- Note and observe the warnings on the product.
- Respect all safety precautions listed in this manual and other pertinent documents.
- Respect the protection requirements and precautions of the lithium battery.

1 Safety Precautions User Manual

#### **A** DANGER

 Electricity may still exist in the battery when the power supply of the equipment is disconnected. Wait 10 minutes to ensure the equipment is completely voltage-free before any operation.

#### **M** WARNING

 All hoisting, transportation, installation, wiring, operation, and maintenance must be carried out complying with the relevant codes and regulations of the country where the project is located.

#### WARNING

 Always use the product in accordance with the requirements described in this manual. Otherwise, equipment damage may occur.

#### NOTICE

To prevent misuse or accidents caused by unrelated personnel, observe the following precautions:

- Post prominent warning signs around the product to prevent accidents caused by false switching.
- · Place necessary warning signs or barriers near the product..

# 1.3 Battery Safety

#### **▲** WARNING

Do not allow the product to remain in a low voltage or low SOC condition for a long time. Capacity loss resulting from any of the following conditions is not covered by the warranty:

- The discharging cell voltage remains below 2.7 V for 120 consecutive hours.
- The SOC of any RACK remains at 0% for 120 consecutive hours.
- The discharging cell voltage is below 2 V.

User Manual 1 Safety Precautions

#### **WARNING**

Cell overvoltage and undervoltage fault/alarm (For details, see Communication Protocol > LC300 Info-3x table > CMU fault word/CMU alarm word).

• Fault: "Cell overvoltage fault", "Cell undervoltage fault", "Total voltage overvoltage fault", "Total voltage undervoltage fault".

• Alarm: "Cell overvoltage alarm", "Cell undervoltage alarm", "Total voltage overvoltage alarm", "Total voltage undervoltage alarm".

End users must prioritize resolving the above faults and alarms reported by the SUNGROW local controller. The relevant fault or alarm information will be shown on the user interface. In addition, users shall contact SUNGROW to resolve the problems promptly to prevent the battery from overdischarging or overcharging, which may void the warranty.

#### NOTICE

- To avoid voiding the warranty, if a cell undervoltage or overvoltage fault occurs, users must contact SUNGROW's local team within 24 hours and follow their instructions.
- The active recharge function is enabled by default at the factory (if the system supports this function). If the SOC is too low, the system will automatically charge the batteries at a low current, until the SOC reaches the safe threshold (configurable).
   SUNGROW recommends keeping this function enabled to minimize the risk of voiding the warranty due to battery undervoltage.

#### NOTICE

- If the system remains inactive for 7 days or longer, it is suggested to raise the SOC lower limit protection value to above 10%. Besides, regularly monitor the system's SOC to prevent overdischarge, which may void the warranty.
- During maintenance or shutdown, if any RACK's SOC falls to 0%, charge it to at least 15% within 120 hours.
- During operation, if any RACK's SOC falls to 0%, charge it to at least 5% within 2 hours. Alternatively, when the SOC reaches 0%, switch the system to recharging mode via the upper computer EMS.

For safe use of the product, technical personnel must thoroughly review and strictly adhere to the following safety requirements. SUNGROW shall not be held liable for product malfunctions, component damage, personal injury, property loss, or other damages resulting from any of the following circumstances:

- Failure to charge the batteries as required, resulting in capacity loss or irreversible damage, due to customer action.
- Battery damage, drops, or leaks due to improper operations or operations not in compliance with the relevant instructions.
- Battery damage from overdischarge caused by not powering on the batteries promptly due to customer action.

1 Safety Precautions User Manual

 Battery damage from using improper equipment for charging or discharging due to customer action.

- Frequent battery overdischarge caused by improper maintenance, improper capacity
  expansion on-site, or batteries not being fully charged for a long time, due to customer
  action.
- Battery damage from incorrect operation parameter settings due to customer action.
- Direct battery damage resulting from an operating environment that does not meet the specified requirements.
- Batteries used beyond the specified scenarios without approval, including but not limited to connecting additional loads, due to customer action.
- Failure to perform maintenance properly according to the system manual due to customer action.
- Damage from continued use of batteries beyond the warranty period due to customer action.
- Damage from use of defective or deformed batteries.
- Use batteries provided by SUNGROW with other batteries, including but not limited to batteries of other brands or of different rated capacities.
- Product or property damage caused by storing or installing batteries in places with flammable or explosive materials.
- Personal injury or property damage resulting from operations performed by unqualified personnel or without appropriate personal protective equipment.
- Battery damage caused by eating, drinking, smoking, or similar activities nearby.

# 1.4 Hoisting and Transportation

#### **▲** WARNING

When walking on the top of the equipment, be sure to follow the standard procedure for working at heights.

# 1.5 Installation and Wiring

#### **A** WARNING

In the whole process of mechanical installation, the relevant standards and requirements of the project location must be strictly observed.

#### **WARNING**

Only equipment designated by SUNGROW can be used. Failure to use equipment designated by SUNGROW may cause damage to the protection function and injury to personnel.

User Manual 1 Safety Precautions

## 1.6 Operation and Maintenance

#### **WARNING**

 Wear personal protective equipment (PPE) when performing equipment maintenance or servicing.

 Maintenance personnel must wear PPE properly, including goggles, helmets, insulated shoes, and gloves.

#### **▲** WARNING

- · There are no user-maintainable parts inside the battery unit.
- Only personnel authorized by SUNGROW may remove, replace, or dispose of batteries. Users are prohibited from performing battery maintenance.

#### **▲ WARNING**

- To prevent electric shock, do not perform any maintenance operations beyond those covered in this manual.
- To protect the components secured on the doors (e.g., EMS and LC) from short circuits caused by rainwater, avoid opening the doors for operation and maintenance on rainy days.
- If maintenance services are required, contact SUNGROW Customer Service.

#### **M** WARNING

 Replacement of internal components must be performed exclusively by qualified personnel to ensure continuous fire protection.

#### DANGER

Dismantling or incinerating the battery may result in fire.

#### **NOTICE**

- · Do not spray paint any internal or external component of the equipment.
- Do not use cleaning agents to clean the equipment or expose the equipment to harsh chemicals.

#### **M** WARNING

• When replacing coolant (ethylene glycol solution) or performing maintenance on liquid cooling pipes, wear protective equipment such as goggles.

1 Safety Precautions User Manual

# 1.7 Product Disposal

When the equipment or its internal components reach end-of-life, do not dispose of it together with household wastes. Some components inside the equipment can be recycled, while some may pollute the environment.

Contact an authorized local facility for collection.



# 2 Product Description

#### 2.1 Product Overview

#### **Product Model**

The product model designation is defined as follows.



No.	Definition	
Α	Energy storage product	
В	Battery capacity	
С	Intended for commercial & industrial applications	
D	Designed operating duration of the system (in hours)	

#### **Typical Application**

The energy storage system (hereinafter referred to as the "ESS") integrates the electrical equipment, communication device, temperature control system, and fire suppression system into a single cabinet. For electrical equipment, the LFP battery system features liquid cooling, while the DC/AC power converter unit adopts forced air cooling for heat dissipation; these two components are integrated into the ESS through an all-in-one design. For communication devices, the LC incorporates the functions of BSC, and the CMU is built into the DC/AC power converter unit. The integrated design makes the entire system more compact in structure and easy to maintain.

With an all-in-one design, the ESS allows flexible configuration and easy installation, operation, and maintenance, with only a small space required. It also supports ancillary services such as demand control, gaining revenue from peak-to-trough price spread (peak-valley arbitrage), demand response, and virtual plant.

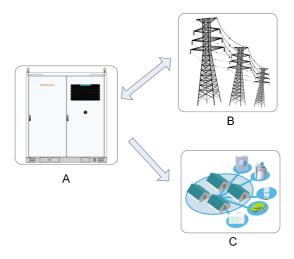


Figure 2-1 Typical Application of the ESS

\*The figure is for reference only. The actual product may differ.

No.	Item
Α	ESS
В	Grid
С	Loads

# 2.2 External Design

# 2.2.1 ESS External Design

The external design of the ESS is shown in the figure below.

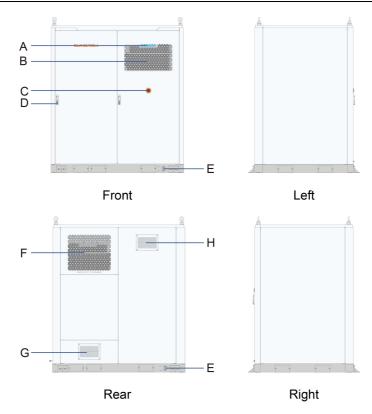


Figure 2-2 ESS External Design

\*The figure is for reference only. The actual product may differ.

No.	Name	
Α	Indicator light	
В	Air inlet	
С	Emergency stop button	
D	Door lock	
E	Grounding point	
F	Air outlet	
G	Air inlet for emergency ventilation (optional)	
Н	Air outlet for emergency ventilation (optional)	

#### NOTICE

The nameplate contains critical parameter information related to the ESS and must be protected against damage during transport, installation, maintenance, overhaul, and other operations. Do not damage or remove the nameplate!

#### **Indicator Light**

The indicator light is located at the top of the ESS. The description of the indicator light status is shown as follows.

**Table 2-1 Indicator Light Status** 

Indicator Status		Description
	Steady on	The system is operating properly (charging/discharging)
	Blink with fading effect at 2-second intervals (Breathing)	The system is normal and currently not charging or discharging
****	Steady on	There is a fault in the system (the auxiliary power supply is not disconnected)
****	Off	The auxiliary power supply is disconnected

#### **Emergency Stop Button**

In case of an emergency, press the emergency stop button. The system will then stop operating immediately.

#### **A** DANGER

After the emergency stop button is pressed, the system will shut down and the DC contactor and main AC circuit breaker will open. However, the internal auxiliary power supply and the PCB board will still carry voltage. Do not touch them!

#### 2.2.2 Mechanical Data

#### **Overall Dimensions**

The dimensions of the ESS are shown in the figure below.

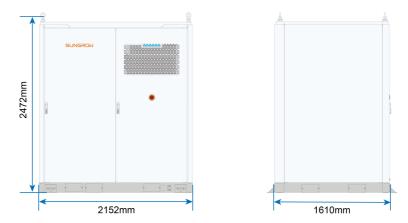


Figure 2-3 Overall Dimensions

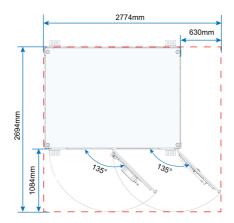


Figure 2-4 Dimensions of ESS with its Door Fully Open

# 2.2.3 Ventilation Design

The ventilation design of the ESS is illustrated in the figure below.

<sup>\*</sup>The figure is for reference only. The actual product may differ.

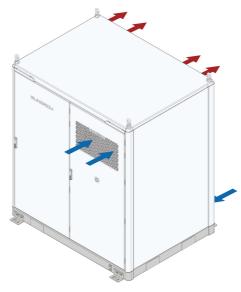


Figure 2-5 Ventilation Design

# 2.3 Internal Design

# 2.3.1 Internal Components

The main electrical equipment inside the ESS is shown in the figure below.

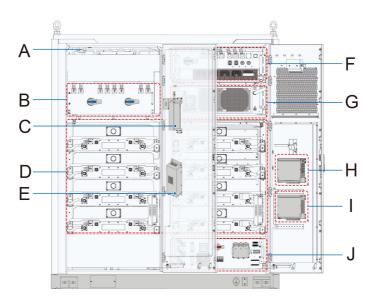


Figure 2-6 Internal Structure of the ESS

<sup>\*</sup>Air inlet and outlet for emergency ventilation (optional).

<sup>\*</sup>The figure is for reference only. The actual product may differ.


No.	Name	
Α	Detectors of fire suppression system	
В	Switch gear (S/G)	
С	Aerosol	
D	Battery RACK (compartment)	
E	Dehumidifier	
F	DC/AC power converter unit (SC125CX)	
G	Liquid cooling unit (LCS)	
Н	LC300	
ı	EMS300CP (optional)	
J	Power distribution box (BSP)	

<sup>\*</sup>The figure is for reference only. The actual product may differ.

# 2.3.2 DC/AC Power Converter Unit (SC125CX)

# **External Design**

The external design of the SC125CX DC/AC power converter unit is shown in the figure below.

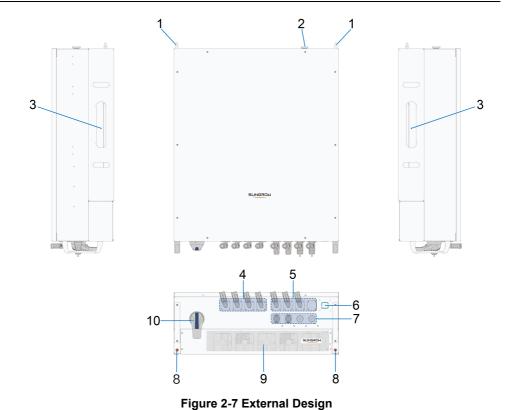

\*The figure here is for reference only. The actual product may differ.

No.	Designation	Description
1	Locating pin	Used to restrict the free movement of the DC/AC power converter unit.
2	Vent valve	Resistant to dust and water; air permeable.
3	Guide rail	Used for the transport, installation, and removal of the device.
4	Ports for DC wiring	Used for DC wiring of the device.
5	Ports for AC wiring	Used for AC wiring of the device.
6	Indicator light	Indicates the current operating status.
7	Ports for communication wiring	Used for communication wiring of the device.

No.	Designation	Description
8	*Additional grounding terminal	Used for additional protective grounding, as specified in EN 50178.
9	Air inlet cover	Fans are installed at the back of the cover plate, used for forced cooling.
10	DC switch	Used to disconnect the device from the battery safely.

#### **WARNING**

\*During product use, avoid DC positive/negative-to-ground short circuits and short circuits between the positive and negative terminals. Otherwise, it may lead to serious damage to the DC/AC power converter unit.

In case a short circuit fault has occurred, the whole DC/AC power converter unit needs to be replaced.

#### **Indicator Light Panel**

The indicator light panel serves as an interface for human-machine interaction and is used to indicate the current operating status of the DC/AC power converter unit.

**Table 2-2 Indicator Light Status** 

Indicator	Status	Description
	Steady on	The device is operating.
	Blink fast (Interval: 0.2 s)	The device has connected to Bluetooth and data communication is in process.  There is no fault in the device.
Blue	Blink slow with fading effect (Interval: 2 s)	The device has been powered on and is in the emergency stop, standby, or startup state.
	Steady on	A fault has occurred (the device cannot connect to the grid).
Red	Blink	The device has connected to Bluetooth and data communication is in process.  There is a fault in the device.
	Off	The AC and DC sides are both disconnected from power.

Indicator	Status	Description
Off		_

#### 2.3.3 Power Distribution Box

#### **External Design**

The external design of the power distribution box is shown in the figure below.

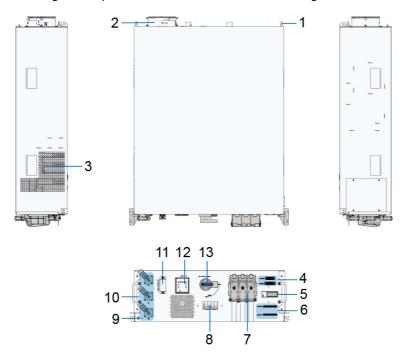


Figure 2-8 External Design

\*The figure here is for reference only. The actual product may differ.

No.	Designation	Description
1	Locating pin	Used to restrict the free movement of the power distribution box.
2	Air outlet	Used to exhaust the circulating hot air from the power distribution box.
3	Air inlet	Used to bring circulating cool air into the power distribution box.
4	Connection ports 3–4	Used for power supply or communication wiring of the 24 Vdc device inside the cabinet.

No.	Designation	Description
5	Ethernet communication port	Used for communication wiring of the device.
6	Connection ports 1–2	Includes communication and 24 V power supply.
7	Ports for AC output wiring	Used for AC output wiring of the device.
8	Miniature circuit breaker	AC auxiliary power supply and UPS control switch.
9	Additional grounding terminal	Used for additional protective grounding, as specified by EN 50178.
10	Ports for AC input wiring	Connected to the AC side of the DC/AC power converter unit.
11	Power port for liquid cooling unit	Used for power supply wiring of the liquid cooling unit.
12	UPS	Uninterruptible power supply.
13	AC main switch	Used to disconnect the device from loads safely.

<sup>\*</sup>The system is equipped with an internal auxiliary power supply as standard.

# 2.3.4 Battery

#### Cell

The exterior and technical data of the cell are shown as follows.

Table 2-3 Cell Data 1

Cell	Parameter	Value
10	Rated capacity	314 Ah
	Rated energy	1004.8 Wh
	Rated Voltage	3.2 V
	Voltage range	2.5 V – 3.65 V (cell temperature T > 0 °C) 2.0 V – 3.65 V (cell temperature T ≤ 0 °C)

The dimensions and weights of cells from different brands are shown below.

Table 2-4 Cell Data 2

Dimensions (Thickness * Height * Width)	Weight
$(71.60 \pm 0.5)$ mm * $(207.20 \pm 0.8)$ mm * $(174.7 \pm 0.8)$ mm (including terminal post) $(71.60 \pm 0.5)$ mm * $(204.57 \pm 0.8)$ mm * $(174.7 \pm 0.8)$ mm (not including terminal post)	(5.56 ± 0.083) kg
$(71.60 \pm 0.5)$ mm * $(207.20 \pm 0.8)$ mm * $(174.30 \pm 0.8)$ mm (including terminal post) $(71.60 \pm 0.5)$ mm * $(204.60 \pm 0.8)$ mm * $(174.30 \pm 0.8)$ mm (not including terminal post)	(5.6 ± 0.084) kg

#### **PACK**

The PACK (battery module) is mainly composed of cells connected in series and features functions including battery voltage and temperature sampling and balancing control. Designed with a chip dedicated to battery management, it receives control commands and uploads collected data through daisy chain communication.

Table 2-5 PACK Data 1

PACK	Parameter	Value
	Dimensions (W*H*D) (not including wiring terminals and faucets)	(868 ± 5 mm) * (247 ± 5 mm) * (1415 ± 5 mm)
	Charge/discharge rate	≤ 0.5P
	Cell type	Prismatic cell with aluminum shell, LFP
0	Configuration (series and parallel)	1P64S
	Key components	64 cells, 1 BMU, 1 fuse (1P64S)
	Ingress protection rating	IP65

The weights of different models of PACK are shown below.

Table 2-6 PACK Data 2

PACK Model	Weight
P0643AL-AHA / P0643BL-AHA P0643AL-AA-H / P0643BL-AA-H	(410 ± 6) kg

PACK Model	Weight
P0643AL-AMA / P0643BL-AMA P0643AL-AA-M / P0643BL-AA-M	(413 ± 6) kg

#### **RACK**

The RACK is mainly composed of several PACKs and fuses.


Technical data of the RACK is shown in the table below.

**Table 2-7 RACK Data** 

RACK Model	DC Output Voltage Range	Rated Power	Rated Voltage	Short- Circuit Current
R0514BL-AHCA R0514BL-ACA-H R0514BL-AMCA R0514BL-ACA-M	691.2 V – 934.4 V	128.6 kW	819.2 V	≤ 20 kA

#### **RACK Structure**

**Table 2-8 RACK Structure** 

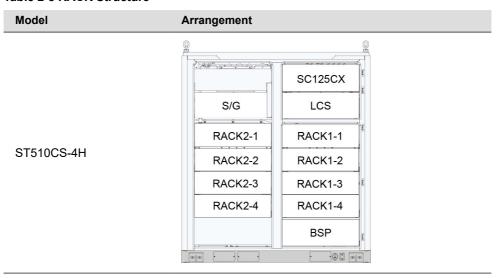

Note: RACK x-x represents a 1P64S PACK. S/G stands for switch gear, SC125CX for DC/AC power converter unit, LCS for liquid cooling unit, and BSP for power distribution box.

## 2.4 EMS (Optional)

The EMS300CP energy management system (EMS) controller can collect the operation data of the ESS and upload them to iSolarCloud so that users can monitor and control the system operation remotely.

EMS300CP is an optional feature. It is positioned on the inner side of the cabinet door for easy maintenance and management.

#### **Auxiliary Meter**

In addition to the ESS operation data, the EMS300CP also needs to collect the meter data, as required by some particular functions. Therefore, please install the following three meters before installing the ESS.

- Gateway meter: Reverse power protection, demand control.
- · Overload monitoring meter: Overload protection.
- · Electricity meter: Overload protection.

#### Monitoring via Local Web

The internal communication wiring between the EMS300CP and the ESS is completed at factory. At the site, connect the PC to the communication port on the ESS. Then, you may access the EMS300CP Web system on the PC.

The homepage of the EMS300CP Web system is shown below:

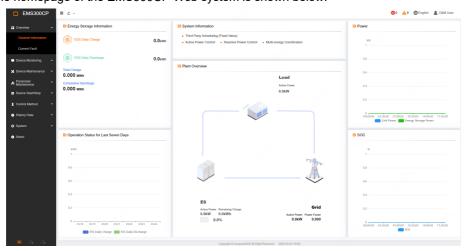



Figure 2-9 Homepage of EMS300CP Local Web

You can scan the QR code on the nameplate on the back of the ESS to get the user



manual for the EMS300CP Web system, or scan the QR code:

To connect the EMS to a northbound controller, set Operation Mode to Third Party Scheduling on the Web of the EMS300CP.

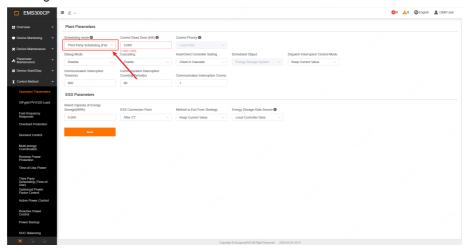

#### Remote Monitoring via iSolarCloud

You can also monitor the ESS remotely via iSolarCloud. You can log in to the iSolarCloud Web system on the PC, or download the iSolarCloud App from an application store on your





Figure 2-10 EMS300CP Homepage in iSolarCloud (Web)

# 3 Transport and Storage

#### 3.1 Precautions

## **A** CAUTION

Failure to transport and store the product in accordance with the requirements in this manual may invalidate the warranty.

#### 3.2 Transport Methods

The ESS can be transported by land and sea. It adopts an integrated and easy-to-lift design that facilitates transport. Currently, permission has not been granted to transport the ESS by air, and no relevant guide for rail transport is available.

The ESS can be transported by truck within the country.

#### NOTICE

In most cases, the total weight of the truck that carries the ESS will exceed the general weight limit on the road. Therefore, you may need to acquire an overweight permit from the relevant local agency in that area.

# 3.3 Transport Requirements

The ESS leaves the factory with most of its internal components secured inside its body. You may lift or move the ESS as a whole directly during transport.

#### **A WARNING**

In the whole process of loading, unloading, and transport, follow strictly the applicable safe operation procedure for ESS in the country/region where the project is located.

- All the tools used on the ESS, or during operation, must have undergone proper maintenance.
- All personnel engaged in loading, unloading, and anchoring operations must have received relevant training, especially in safety.
- Do not transport the ESS when the temperature is below -30 °C.

User Manual 3 Transport and Storage



During the whole process of loading, unloading, and transport, always keep in mind the mechanical parameters (overall dimensions and weight) of the ESS.

To transport and move the ESS, make sure the below requirements are met:

- · All the doors of the ESS are locked.
- Select an appropriate crane or lifting tool according to the on-site conditions. The tool used must have a sufficient load capacity, boom length, and swing radius.
- · It is recommended to use one crane to lift the ESS.
- Extra traction may be required to move the ESS along a slope.
- Remove all obstacles that exist or may exist along the route, such as tree branches and cables.
- Transport or move the ESS in good weather, whenever possible.
- Be sure to set up warning signs or fence off warning zones to prevent irrelevant personnel from entering the operating area, thus avoiding accidents.
- · The ESS must stand upright during transport.
- Ensure the base of the ESS remains level throughout the whole transport process, with a maximum allowable tilt of 15°.
- · Avoid collision or strong shock during transport.
- If the ESS is transported by land, use ropes to secure the lifting rings at the top of the ESS to the transport vehicle, to prevent it from getting overly tilted during transport.
  - A

After the ESS arrives at the project site, remove the diagonal fixing pieces at the top four corners, and store them properly.

# 3.4 Storage Requirements

- The base of the ESS must be elevated off the ground to a certain height, to avoid condensation inside the ESS and prevent the ESS bottom from getting soaked by rain water in rainy seasons. The height shall be decided according to the on-site geological and meteorological conditions, etc.
- Store the ESS on a dry, flat, and solid platform that has a sufficient load capacity and is
  not covered by any vegetation. The surface where the ESS is stored must be flat,
  without bumps or rolls-and-swells. It must have an unevenness of ≤ 5 mm and be free of
  water accumulation.
- Before storage, ensure that the doors of the ESS and all its internal components are locked.
- Maintain a clearance of 200 cm in front and 60 cm behind the ESS during storage.
- Storage ambient temperature: -30 °C to 50 °C. Recommended storage temperature: -30 °C to 25 °C.
- Long-term storage of the battery is not recommended as it may lead to battery capacity degradation. Even if the battery is stored at the most recommended storage

3 Transport and Storage User Manual

temperature, irreversible capacity degradation will still happen during the period of rest, and such degradation will become severer as the storage time lengthens. Please refer to the technical agreement for the specific amount of degradation.

- The UPS that is not put into operation needs to be charged every six months.
- Relative humidity in the storage environment: 0%–95%, non-condensing.
- Take effective measures to protect the air inlet and outlet of the ESS and prevent the ingress of rainwater, sand, and dust.
- Carry out routine inspections. Perform routine inspections at least every half a month.
   Inspect the packaging for intactness and signs of damage caused by pests or animals.
   Repackage the equipment immediately if the packaging gets damaged. Inspect the ESS and its internal components for damage.
- Before installing an ESS that has been stored for more than six months, open the door
  and conduct a visual inspection first. Make sure the ESS and its internal components
  are all intact without any damage. Meanwhile, perform inspections after powering on
  and starting up. If necessary, ask qualified personnel to test the ESS before installation.
- PACKs must be stored in a clean and dry place and must not be left out in the heat of
  the sun or rain. The place must be free of hazardous gas, flammables, explosives, or
  corrosive chemicals. Besides, avoid mechanical shock, great pressure, strong magnetic
  field, or direct sunlight.
- Avoid damage to the PACK caused by severe environmental conditions such as sudden temperature changes or collisions.
- The packing case cannot be tilted or turned upside down.

If the ESS has been stored for over 6 months (from the date it is delivered from SUNGROW) under the required conditions mentioned above, perform charging/discharging once until the system SOC reaches 30%–40%. Make sure the SOC value is consistent after recharging.



# 4 Mechanical Installation

#### **A WARNING**

During the whole process of mechanical installation, the relevant standards and requirements of the project site must be strictly observed.

#### 4.1 Inspection Before Installation

#### 4.1.1 Deliverables Inspection

Check whether deliverables are complete against the attached packing list.

#### 4.1.2 Equipment Inspection

- Check whether the product you have received matches the order you have placed.
- · Inspect the equipment and its internal components, and make sure there is no damage.
- If an EMS300CP is equipped (optional), before commissioning, ensure the gateway meter and electricity meter used in conjunction with EMS300CP are properly installed.

In case of any problem or doubt, contact your transport service provider or SUNGROW in time.

#### **A** WARNING

Proceed with installation only if the ESS is intact without any signs of damage! Before installation, ensure that:

- The ESS is in good condition, without any damage.
- All the components inside the ESS are intact without any signs of damage.

#### NOTICE

Before installing an ESS that has been stored for more than six months, open the door and conduct a visual inspection first. Make sure the ESS and its internal components are all intact without any damage. Meanwhile, perform inspections after powering on and starting up. If necessary, ask qualified personnel to test the equipment before installation.

#### NOTICE

Inspect the equipment for paint damage. If damage is found, it is suggested to repair the paint to prevent rusting. For detailed instructions, see "Appearance Repair".

# 4.2 Installation Environment Requirements



4 Mechanical Installation User Manual

#### 4.2.1 Installation Site Requirement

 The climate environment and geological conditions, such as stress wave emission and underground water level, should be fully considered when selecting the installation site.

- · The environment around the installation site should be dry and well ventilated.
- There should be no trees around the installation site to prevent branches or leaves blown off by heavy winds from blocking the door or air inlet of the energy storage system.
- The installation site should be away from areas where toxic and harmful gases are concentrated, and free from inflammable, explosive and corrosive materials.
- It is suggested the product be installed in a place away from the residential area.
   Ensure the distance and noise requirements specified by the local laws and regulations are met. If the requirements cannot be met due to geographical restrictions, use noise mitigation measures. For detailed solutions, consult with the designer or SUNGROW.
- Avoid installing the battery container in dusty environments with a large amount of dust, smoke, or floc. These particles may cling to the air inlets/outlets or heat sink of the battery container, thus impairing its heat dissipation performance or even getting it damaged.
- Avoid installing the battery container in places where corrosive gas or dust may be
  produced or accumulated, or in places within 30km (20 miles) of saline-alkaline land or
  pollution-generating industrial complex such as chemical plants and power plants
  (chemical gas class: 1C1, solid particle level: 1S2).
- Do not install the battery container in environments contaminated with halogen or sulfur pollutants.
- There are no underground facilities at the site.

#### NOTICE

Do not install the device in an environment with vibration and strong electromagnetic field. Strong-magnetic-field environments refer to places where magnetic field strength measures over 30 A/m.

#### 4.2.2 Foundation Requirements

#### **M** WARNING

Considering the equipment's heavy weight, before foundation building, perform a thorough inspection on the installation site first (from the aspects of geology, environment, and climate, etc.). You can only proceed with foundation design and construction after confirming that the installation site meets all relevant requirements.

An improperly built foundation may lead to difficulties or troubles in equipment mounting, opening and closing of cabinet doors, and the future operation of the equipment. Therefore, the foundation must be designed and constructed in compliance with certain standards, to meet the requirements of support structure, cable laying, and future maintenance.

Make sure at least the below requirements are met during foundation building:

User Manual 4 Mechanical Installation

- The bottom of the foundation pit must be compacted, filled and made even.
- The foundation must be built in compliance with the foundation drawing provided, or approved, by SUNGROW. The tolerance for the upper surface of the foundation is ± 5 mm.
- The foundation must provide sufficient and effective support for the equipment.
- The equipment must be positioned in a higher place, to protect its base and interior from rain erosion. It is recommended to build a foundation about 300 mm higher than the horizontal ground.
- Set up a proper drainage system based on the local geological conditions.
- Build a cement foundation with sufficient cross-sectional area and height. The foundation height shall be determined by the constructor based on the on-site geological conditions.
- Take cable laying into consideration when building the foundation.



In the process of foundation building, remove the muck immediately after excavation, to avoid affecting the hoisting and transport of the equipment.

- Build a maintenance platform around the foundation to facilitate future maintenance.
- During the foundation building, reserve sufficient space for the AC side cable trench
  according to the position and size of the cable inlet and outlet on the equipment, and
  embed the cable conduit in advance.
- Determine the specifications and quantity of the perforating gun according to the model and quantity of cables used.
- Both ends of each embedded conduit must be temporarily sealed off to prevent the ingress of foreign objects. Otherwise, it may lead to difficulties in wiring.
- After all the cables are connected, seal off the cable inlet and outlet and the connectors
  with fireproof mud or other suitable materials, to prevent rodents from entering the
  equipment.



Pre-bury the grounding unit according to the applicable standards of the country/region where the project is located.

#### 4.2.3 Installation Space Requirements


For effective heat dissipation and ease of maintenance, it is recommended to reserve sufficient space around the ESS during installation.

#### NOTICE

The clearance here refers to the clearance between cabinets, not foundations.

4 Mechanical Installation User Manual

#### **Installation of One ESS**

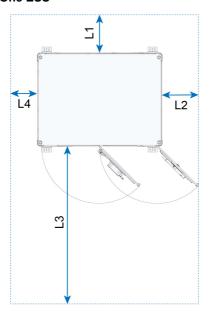

Wall or other equipment

Figure 4-1 Space Required for One ESS


Maintenance Item	Clearance Requirements
Maintenance tooling for non- PACK components	L1 ≥ 600 mm, L2 ≥ 430 mm, L3 ≥ 2500 mm, L4 = 0
PACK maintenance tooling	L1 ≥ 600 mm, L2 ≥ 630 mm, L3 ≥ 2000 mm, L4 ≥ 400 mm



For systems equipped with air intake and exhaust fans, increase L1 to 600 mm.

User Manual 4 Mechanical Installation

### Installation of Multiple ESSs

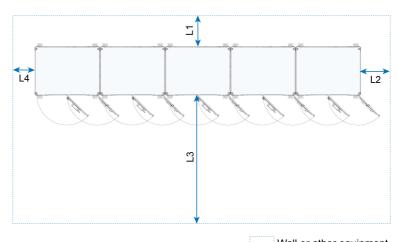

Wall or other equipment

Figure 4-2 Space Required for ESSs in One Row

Maintenance Item	Clearance Requirements
Maintenance tooling for non- PACK components	L1 ≥ 600 mm, L2 ≥ 430 mm, L3 ≥ 2500 mm, L4 = 0
PACK maintenance tooling	L1 ≥ 600 mm, L2 ≥ 630 mm, L3 ≥ 2000 mm, L4 ≥ 400 mm



For systems equipped with air intake and exhaust fans, increase L1 to 600 mm.

4 Mechanical Installation User Manual

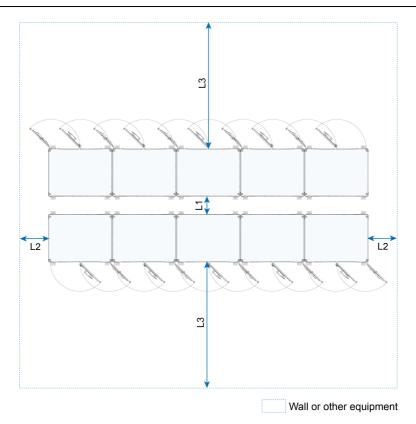


Figure 4-3 Space Required for ESSs in Two Rows

Maintenance Item	Clearance Requirements
Maintenance tooling for non- PACK components	L1 ≥ 600 mm, L2 ≥ 430 mm, L3 ≥ 2500 mm
PACK maintenance tooling	L1 ≥ 600 mm, L2 ≥ 630 mm, L3 ≥ 2000 mm

<sup>\*</sup>The figure is for reference only. The actual product may differ.



When arranging the ESSs in two rows, ensure that the two rows are aligned on both sides. Avoid misaligned arrangements to minimize the risk of hindered heat dissipation.

User Manual 4 Mechanical Installation

#### With Obstructions in Heat Dissipation Path

If the ESS is installed indoors or if there are significant obstructions in the air outlet pathway, add ventilation equipment to enhance heat dissipation. The temperature at the air inlet must not exceed 45°C to ensure long-term stable operation of the system.

For indoor installation, ensure that the distance from the top and two sides of the ESS to any obstructions that could hinder heat dissipation, such as walls, meets the following requirements:

Maintain a clearance of ≥ 800 mm above the ESS for effective ventilation.

#### NOTICE

Ensure a ventilation rate of  $\geq$  2500 m<sup>3</sup>/h and a cooling capacity of  $\geq$  7 kW at the rear air outlet of each ESS.

#### NOTICE

Outdoor installations where heat dissipation is significantly compromised by large obstructions above or beside the ESS are treated as indoor installations. In such cases, the distance from the cabinet to the obstruction must comply with the same requirements specified for indoor installations.

 Installing the ESS outdoors is recommended, as per the general plant design standards.



 If indoor installations are selected due to layout constraints: SUNGROW specifies indoor arrangement requirements from the perspective of product design and maintenance only. The owner/EPC shall consider plant-level requirements in these cases.

# 4.3 Handling with Forklift

You can move the ESS using a forklift if the ground on the installation site is flat. Forklift pockets are provided at the bottom of the ESS for the insertion of forklift forks.

To move the ESS using a forklift, make sure the below requirements are met:

- The forklift has sufficient load capacity.
- · The forks are long enough for moving the equipment.

The forks must be inserted into the forklift pockets at the bottom of the equipment (see the figure below for the positions of the pockets). The depth of the forks inserted into the pockets should be the depth of the pockets.

• Transport, move, and place the ESS slowly and steadily. It is suggested to perform a test lift first, to make sure all requirements are met.

4 Mechanical Installation User Manual

 Position the ESS on a stable surface only. The place must be free of obstacles or protrusions, with good drainage.

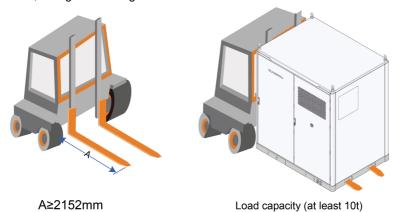


Figure 4-4 Handle with Forklift (Side)

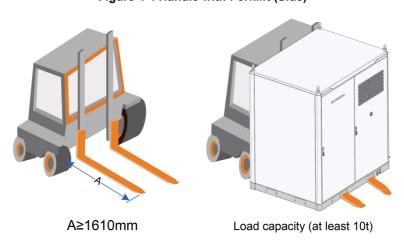


Figure 4-5 Handle with Forklift (Front)

### **WARNING**

- · Move the ESS using a forklift through the bottom forklift pockets.
- Never insert the forklift forks into any position on the equipment else than the bottom pockets.

### **NOTICE**

The ESS will be delivered with forklift pockets exposed to air. Cover the pockets with sealing plates after the installation is completed. The sealing plates are included in the accessories.

## 4.4 Hoisting and Transport

User Manual 4 Mechanical Installation

#### 4.4.1 Precautions

Strictly adhere to safe operating procedures throughout the hoisting process to ensure the safety of operators, equipment, and the surrounding environment.

### **Requirements for Hoisting**

- Qualifications:
  - Engage a qualified specialized hoisting service provider to perform the hoisting.
- Foundation:
  - Ensure sufficient space is reserved in the cable trench, and the cable conduit is embedded in advance.
  - Clearly mark the designated area for the equipment on the foundation with lines.
  - Prior to hoisting, recheck the flatness of the foundation. The flatness deviation must not exceed 10 mm, and the slope must not exceed 5°.
  - Correct any excessive deviations in flatness or slope, or prepare in advance an adequate number of metal washers that match the sizes of the load-bearing points.
  - If a firewall is present on site, ensure that the designated area for the ESS is ≥ 150 mm away from the firewall.
- · Familiarity with Equipment Arrangement
  - Properly determine the order of trailer arrivals at the site based on the project's equipment layout. Vehicles carrying lifting devices have priority for entry.
  - Determine the positions and orientations of all equipment.
  - Identify the location of any ESSs that are not fully equipped (not fully loaded with PACKs).
  - Ensure that all ESSs within the same block are of the same grade (battery grade).
- Equipment Status:
  - Verify that all equipment and lifting devices have undergone inspections, and that cabinet doors are securely closed and locked.

#### **Selection of Cranes**

The load capacity of the crane must be determined based on the weight of the load to be lifted, the crane's operating zone (operating radius and range of motion) and design parameters, the foundation conditions, and the specific hoisting requirements.

### **M** WARNING

Before hoisting, select an appropriate crane with sufficient load capacity based on an evaluation by a qualified hoisting service provider to ensure operation safety. SUNGROW shall not be held liable for any damage resulting from the use of inappropriate cranes.

### Lifting Device Requirements

 Please use the lifting devices provided by SUNGROW (slings, shackles, and lifting beams). 4 Mechanical Installation User Manual

 If it is necessary to use slings and shackles that are not provided by SUNGROW due to special circumstances, ensure that the selected lifting devices meet the requirements specified in "Hoisting Operation".

### **Safety Instructions**

### **WARNING**

Perform operations in strict accordance with the local safe operating procedures relevant to the country or region, including but not limited to:

- Stop hoisting immediately in severe weather conditions, such as heavy rain, fog, or strong winds.
- Set up warning signages or fence off a warning zone to prevent irrelevant personnel from entering the operating area, thus avoiding personal injury or death.
- Ensure that all personnel engaged in hoisting, loading, unloading, and anchoring operations have received relevant training, especially in safety.
- Do not stand directly beneath or within 10 meters of any moving equipment to avoid personal injuries or death.
- Conduct all work under the guidance of qualified technical personnel on site.
- Ensure that all tools and equipment used during the operation have undergone proper maintenance.
- · Lift and lower the equipment gently, avoiding any dragging or collisions.
- · Do not proceed with hoisting in low light conditions or when vision is not clear.
- Do not proceed with hoisting if there is any person or moving or movable objects on top of the equipment.

User Manual 4 Mechanical Installation

### 4.4.2 Hoisting Operation

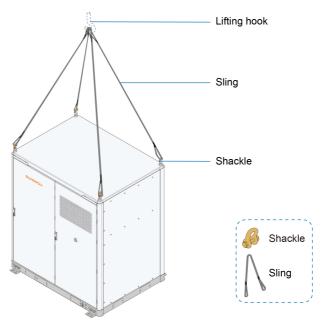


Figure 4-6 ESS Hoisting

\*The figure here is for reference only and the actual product may differ.

 If using lifting devices that are not provided by SUNGROW, ensure that their specifications meet the requirements listed above. Request the hoisting service provider to conduct a thorough evaluation before proceeding with the hoisting.



- Each sling is 4 meter long and is folded for use. If using the slings unfolded, ensure that each sling has a rated load capacity of 30 tons.
- After hoisting, store the lifting devices properly for future use.

### 4.4.3 Hoisting Procedure

Step 1 Secure the lifting devices.

- a. Pass the 2 slings respectively through the 4 shackles.
- b. Secure the 4 shackles respectively to the 4 lifting lugs at the top of the ESS.
- c. Hang the 2 slings onto the crane's lifting hook.

**Step 2** Lift the equipment smoothly and stably.

- **a.** Suspend lifting when the equipment is lifted 300 mm off the supporting surface. Then, check the connections between the slings and the equipment.
- **b.** Ensure that the connections between the slings and the equipment are all secure and that the angle of the equipment relative to the horizontal plane is less than 5° after it settles naturally. Once confirmed, continue with the lifting.

Step 3 Lay the equipment down steadily in the designated area marked by lines on the foundation.

4 Mechanical Installation User Manual

Step 4 Check and adjust the load-bearing points.

a. Verify that the equipment doors open and close properly, that the equipment frame shows no signs of deformation, and that the equipment rests securely and evenly on the supporting surface.

b. If any deformation is detected, lift the equipment slowly and add washers at the load-bearing points. Then, lower the equipment again gradually, until it is fully seated with each load-bearing point completely bearing the weight.

### Step 5 Remove the lifting devices.

#### --End

Ensure the equipment is securely and fully seated on the foundation within the designated area and neatly positioned. Verify that the equipment is free from deformation and that its doors open and close smoothly.

After hoisting, properly store the lifting devices provided by SUNGROW for future use.

### 4.5 Securing ESS

After moving the ESS and transformer cabinet to the target position, secure them in place. You can secure the equipment by welding or using L-shaped angle steels as needed.

### Secured by Welding

Secure the cabinet bottom to the foundation by welding. Apply anti-corrosion treatment to the welding points after welding is completed.

### Secured with L-shaped Angle Steels

As shown in the figure below, mounting holes for L-shaped angle steels are provided at the bottom of the cabinet.

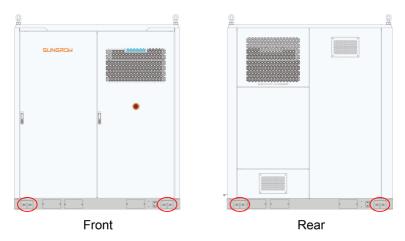


Figure 4-7 L-shaped Angle Steels


Installation Tools

User Manual 4 Mechanical Installation

Tools that may be used when installing the L-shaped angle steels are as follows:

No.	Item	Source
1	Marker	Not included in the scope of delivery
2	Hammer drill	Not included in the scope of delivery
3	Angle steel	Included in the scope of delivery
4	M16 expansion bolt	Not included in the scope of delivery
5	M16 screw	Included in the scope of delivery

### Installation Method

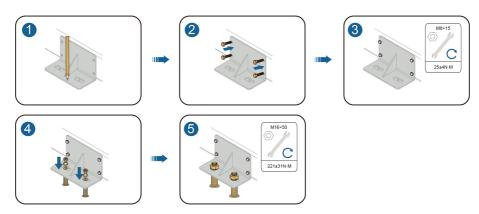

# 4.6 Removing Films


After securing the ESS in place, remove the 3M protective films at the air inlet, air outlet, and door lock.

Remove the 3M film with yellow "Key" label to get the door key.

### **NOTICE**

Be sure to remove the films before putting the ESS into operation.

4 Mechanical Installation User Manual

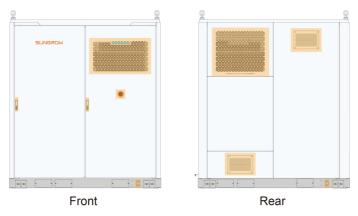

\*The figure is for reference only. The actual product may differ.

# **5 Electrical Connection**

### 5.1 Precautions

### **A** DANGER

High voltage! Electric shock!

- It is strictly forbidden to directly touch the live parts in the unprotected state!
- · Before installation, ensure that the all switches are off.

### **WARNING**

Sand and moisture penetration may damage the electrical equipment in the system, or affect their operating performance!

- Avoid electrical connections during sandstorms or when the relative humidity in the surrounding environment is greater than 95%.
- Perform electrical connection when there is no sandstorm and the weather is fair and dry.

### **▲** WARNING

- Before wiring, check and ensure that the polarity of all input cables is correct.
- During electrical installation, do not forcibly pull any wires or cables, as this may compromise the insulation performance.
- Ensure that all cables and wires have sufficient space for any bends.
- Adopt the necessary auxiliary measures to reduce the stress applied to cables and wires.
- After completing each connection, carefully check and ensure that the connection is correct and secure.

### **▲** WARNING

When an external short circuit occurs in the RACK circuit and the switch box fuse produces a protective action, the fuse and the two DC contactors must be replaced at the same time.

### 5.2 Electrical Connection Overview

The wiring diagram of the ESS is shown below:

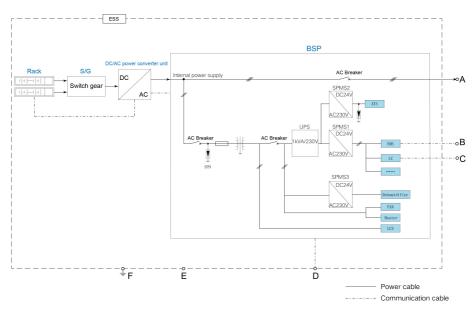


Figure 5-1 Wiring Diagram

**Table 5-1 Interface Description** 

No.	Designation	Recommended Cable Specifications*
Α	AC output port	4×95 mm²/copper cable**
В	EMS communication port***	2×1.5 mm <sup>2</sup> shielded twisted-pair cable
С	LC communication port	2×1.5 mm <sup>2</sup> shielded twisted-pair cable
D	Ethernet communication port	CAT5E S/FTP
E	External auxiliary power supply port****	2×4 mm <sup>2</sup>
F	Grounding point	70–95 mm² yellow-green cable or grounding flat steel

<sup>\*</sup>The above cables are not included in the scope of delivery and need to be prepared separately.

<sup>\*\*</sup>If aluminum cables are selected, users must prepare appropriate OT/DT terminals that match the cable diameter (M12). The aluminum cable diameter shall be < 30 mm.

<sup>\*\*\*</sup>The EMS is optional.

<sup>\*\*\*\*</sup>The system is equipped with an internal auxiliary power supply as standard. The external auxiliary power supply is optional.

User Manual 5 Electrical Connection

### **A** WARNING

 Electrical connections must all be performed in strict accordance with the wiring diagram.

• Electrical connections must all be performed when the equipment is completely voltage-free.

### **M** WARNING

Operations related to the electrical connection must only be performed by qualified electrical engineers, all in compliance with the "Safety Precautions" specified in this manual. SUNGROW shall not be held liable for any personal injury or property damage arising from failure to follow the safety instructions.

### **NOTICE**

- The installation and wiring of the ESS must conform to the applicable standards or regulations in the country/region where the project is located.
- Failing to follow the relevant installation and wiring requirements in this manual may result in equipment or system failure, and the damage caused therefrom will not be covered by warranty.

### 5.3 Preparation Before Wiring

### **5.3.1 Preparing Installation Tools**



Safety gloves



Goggles



Safety shoes



Protective clothing



Torque screwdriver



Wire stripper



Hydraulic pliers



Heat gun



### 5.3.2 Opening Cabinet Door

Open the cabinet door before wiring.

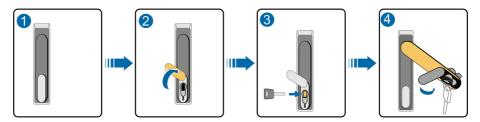


Figure 5-2 Open the Front Door

Steps	Introduction
1	Door locked
2	Move the cover above the lock hole
3	Insert the door key and turn it clockwise
4	Rotate the handle counterclockwise to the position shown in the figure to open the front door.

### 5.3.3 Prepare Cables

#### ▲ 危险

Before electrical connection, check and ensure that the cables are all intact and well-insulated. Poor insulation or cable damage may result in safety hazards. If necessary, replace the cable immediately.

The cables must meet the following requirements:

- The current carrying capacity of the cable meets requirements. Factors affecting the current carrying capacity of a conductor include but are not limited to:
  - Environmental conditions;
  - Type of the insulation material of the conductor;
  - Cabling method;
  - Material and cross-sectional area of the cable.

User Manual 5 Electrical Connection

• Select cables with a proper diameter according to the maximum load, and the cables should be long enough.


- Ensure that all cables and wires have sufficient space for any bends.
- During electrical connection, do not forcibly pull any wires or cables, as this may diminish their insulation performance.
- All DC input cables must be of the same specifications and materials.
- AC output cables of three phases must be of the same specifications and materials.
- · Only flame retardant cables can be used.
- Keep a sufficient distance between the cables and the heat-generating components, to prevent the cable insulation layer from aging or getting damaged due to high temperature.
- After completing each connection, carefully check that the connection is correct and secure.
- · Adopt necessary auxiliary measures to reduce the stress applied to cables and wires.
- Select cables with appropriate cross-sectional areas, according to the actual environmental conditions for heat dissipation of the cables laid on-site.
- Select communication cables equipped with corresponding shielding protection features according to the requirements of SUNGROW.
- Secure the power cables and the communication cables separately. Ensure a minimum space of 10cm between the lines of strong and weak electricity to avoid electromagnetic interference.
- Inspect the connection between the wiring terminal and the copper bar. If any part of the heat-shirk tubing is caught between them, remove it immediately. Otherwise, it may lead to poor contact or even damage due to heat.

### 注意

- The cables used should comply with requirements of local laws and regulations.
- The cable color in figures in this manual is for reference only. Please select cables according to local standards.

### Crimp OT/DT terminals

Follow the steps shown below to crimp terminal.

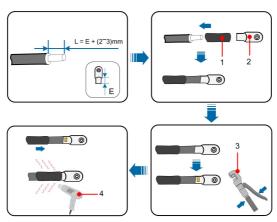


No.	Name	No.	Name
1	Heat shrink tubing	2	OT/DT terminal
3	Hydraulic pliers	4	Heat gun

### 注意

- 请小心剥线,请勿划伤线芯。
- OT/DT 端子的导体压接片在完成压接后,其形成的闭合腔体应完整包裹线芯,确保线 芯与端子之间紧密结合,无任何松动现象。
- 在使用热风枪时,请做好必要的防护措施,避免高温对设备造成热损伤。

### 压接管型端子

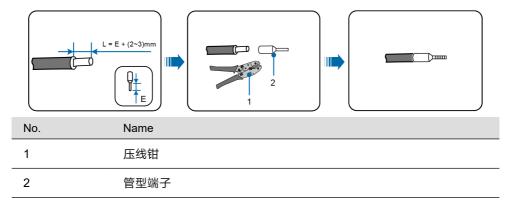

### **5.3.4 Copper Wire Connection**

When copper cables are selected, the connection sequence of wiring parts is shown in the following figure.

User Manual 5 Electrical Connection

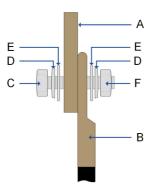


Figure 5-3 Copper cable terminal connection sequence

No.	Name	No.	Name
A	Copper bus bar	D	Spring washer
В	Copper connection terminal	E	Flat washer
С	Bolt	F	Nut

### **NOTICE**

Bolt fastening should be firm and reliable, and the exposed wire buckle should not be less than 2 buckles.

### **5.3.5 Aluminum Wire Connection**

When the aluminum wires are selected, a copper-to-aluminum adapter terminal is needed as shown below:

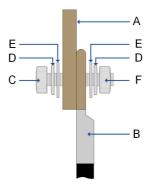


Figure 5-4 Copper-to-aluminum adapter terminal connection

No.	Name	No.	Name
А	Copper bus	D	Spring washer

No.	Name	No.	Name
В	copper- toaluminum adapter terminal	E	Flat washer
С	Bolt	F	Nut

#### NOTICE

Bolt fastening should be firm and reliable, and the exposed wire buckle should not be less than 2 buckles.

### 5.3.6 Cable Inlet Design

Cables connecting the ESS to the external devices can be led through the cable inlet at the bottom of the ESS. Take protective measures for the cables, such as routing cables through conduits, to avoid damage caused by rodents. After wiring is completed, seal off the cable inlet using fireproof mud or other appropriate materials.

The cable inlet design is illustrated in the figure below.

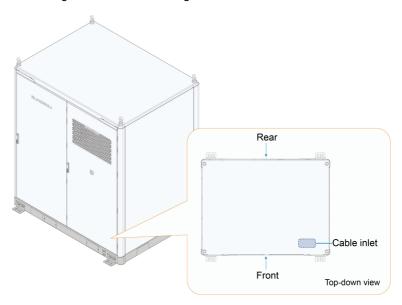


Figure 5-5 Cable Inlet

### NOTICE

If it is required to pre-bury cable conduits in the cable inlet area during construction, please confirm the specific position with SUNGROW.

User Manual 5 Electrical Connection

### **NOTICE**

After wiring, seal off the cable inlet by filling the gaps around the cables with fireproof/waterproof materials, such as fireproof mud, to prevent the ingress of foreign objects or moisture, thus avoiding affecting the product's long-term operation.

### 5.4 Ground Connection

### NOTICE

Grounding must be completed by strictly following the applicable local standards and regulations.

### **NOTICE**

- Before grounding, clean the surface and threads of the grounding point to avoid compromising the grounding performance.
- After grounding is complete, apply anti-corrosion treatment to the ground connection area to avoid rust.

#### Overview

Grounding can be made in the following two ways: welding a grounding flat steel, or connecting a grounding cable. For the position of the grounding point, see "**ESS External Design**".

#### **Grounding Flat Steel (Recommended)**

Remove the protective tape from the grounding point and weld the hot-dip galvanized flat steel to the grounding point (the area where the flat steel and the ESS are joined together should be 40 mm x 70 mm). Spray paint the whole welding area after completing welding.

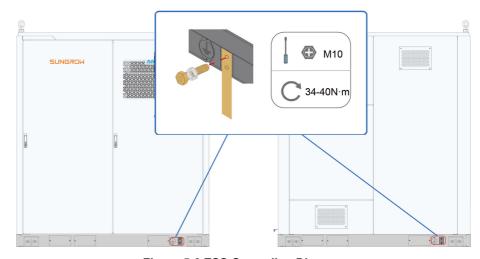



Figure 5-6 ESS Grounding Diagram

\*The figure is for reference only and the actual product shall prevail.

#### **Grounding Cable**

Use a 70 mm<sup>2</sup>–95 mm<sup>2</sup> copper grounding cable to connect the grounding point on the ESS to a designated grounding point properly and reliably (the grounding point is covered with protective tape upon delivery, which should be removed before wiring).

Crimp the DT terminal. For details, see 5.3.3 Prepare Cables. Secure the DT terminal to the wiring hole with an M10 bolt at a tightening torque of 34–40 N·m.

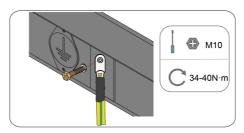

\*The figure is for reference only and the actual product shall prevail.

Carry out external ground connection in compliance with the actual on-site conditions and the instructions by the plant staff.

Measure the ground resistance after completing the grounding. Make sure the resistance does not exceed 4  $\Omega$ .



The specific ground resistance must comply with the applicable national/local standards and regulations.

### 5.5 AC Connection

### 5.5.1 Safety Precautions

### **▲** WARNING

Accidental touching of live terminals can cause fatal electric shock!

- Ensure that the AC/DC switches of the DC/AC power converter cabinet are open, and that the wiring terminals are dead.
- Connecting to the power grid must be approved by the relevant department and comply with all power-related safety instructions and specifications.

User Manual 5 Electrical Connection

### **▲** WARNING

• When connecting to the AC grid, disconnect the upstream AC side circuit breaker to ensure that there is no voltage at the contact terminals.

- Connect to the grid only if approved by the utility grid and all relevant safety instructions are followed.
- The AC output is not grounded inside the device.
- The DC and AC circuits are isolated from the enclosure. If required by the relevant national electrical codes, the installer is required to connect the system.

### 5.5.2 AC Output Wiring

- **Step 1** Switch off the upstream AC circuit breaker and measure with a multimeter to ensure no voltage is present at the terminals.
- Step 2 Lead the cables to the AC wiring area inside the cabinet through the cable inlet.
- Step 3 Connect the AC cables properly in the designated positions.

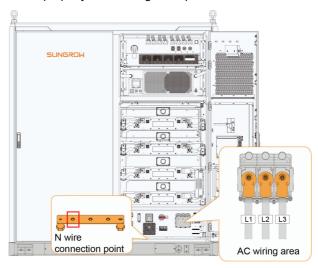


Figure 5-7 AC Wiring Area

- Step 4 Strip the protective layers of the cables using wire strippers to expose the copper cores.
- **Step 5** Crimp the OT terminals. For details, see 5.3.3 Prepare Cables.
- **Step 6** Secure the OT terminals to the wiring holes with M12 bolts at a tightening torque of 40 N·m (for detailed wiring instructions, please refer to 5.3.4 Copper Wire Connection and 5.3.5 Aluminum Wire Connection).
- Step 7 Pull gently the cables backward after wiring, ensuring the cables are long enough.
- **Step 8** Close the protective cover for terminals, fasten the snap-ons on both sides, and tighten the four screws.

#### NOTICE

· Perform wiring in strict accordance with the correct phase sequence.

#### --End

### 5.6 Auxiliary Power Supply Wiring

Devices of the system, such as the internal liquid cooling unit, 24 Vdc device, and fans, are supplied by an external or internal auxiliary power supply. Internal auxiliary power supply is used for this system by default. If the system uses an internal power supply, please disregard the following content.

#### **Prerequisite**

#### **Power Supply Mode**

The auxiliary power supply of the system includes the internal auxiliary power supply and the external auxiliary power supply:

• If the external auxiliary power supply is adopted, use the auxiliary power supply port inside the ESS power distribution box for wiring.

### **Steps for External Auxiliary Power Supply Wiring**

- **Step 1** Make sure the circuit breakers of the upstream and downstream devices are all in the open state.
- Step 2 Pass the cables through the cable inlet/outlet into the ESS.
- **Step 3** Connect the AC cables properly in the designated positions.

**Table 5-2 Port Definition** 

Mode	Port	Introduction	*Recommended cable specifications
230 Vac external	Auxiliary power supply L	Connected to a  customer-side 4 mm <sup>2</sup> power source	4 mm²
power supply	Auxiliary power supply N		4 111111-

<sup>\*</sup>These are recommended cable specifications. You may make adjustments based on actual requirements.

Step 4 Complete the wiring by referring to the port marks on the equipment and the above port definitions. After completing the wiring, secure the terminals at a tightening torque of 5 N·m.

--End

User Manual 5 Electrical Connection

## 5.7 Communication Wiring

The ESS provides interfaces for external Ethernet communication, LC communication, EMS communication, and FSS power supply wiring.

• The default IP address for port LC-ETH1 is 192.168.1.100. The subnet mask is 255.255.255.0 and the gateway is 192.168.1.1.



- The default IP address for port LC-ETH2 is 192.168.13.100. The subnet mask is 255.255.255.0 and the gateway is 192.168.13.1.
- The default IP addresses for the ports of the EMS are as follows:
   192.168.13.200 for ETH1, 192.168.1.200 for ETH2, and 13.13.13.13 for ETH5.

### 5.7.1 Ethernet Communication Wiring

The positions of the Ethernet communication ports are shown in the figure below.

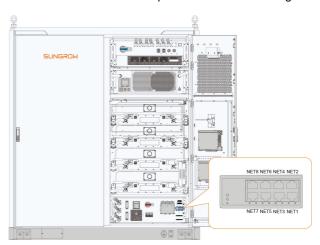


Figure 5-8 Communication Interfaces

**Table 5-3 Interface Description** 

Position	Designation	
NET1-NET2	Used for networking between ESSs	
NET3-NET5	Reserved	
NET6	Connected to LC (internal connections are completed at factory)	
NET7-NET8	Connected to EMS	

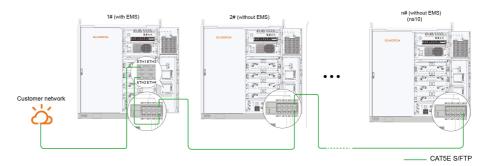


Figure 5-9 Networking Diagram Between ESSs

 The system supports up to 10 ESSs in parallel. The ESS with an EMS is accessed to the customer network and connected hand-in-hand with other ESSs that do not have EMS.



- You may read the label on the power distribution box to understand whether the product is equipped with an EMS.
- NET1 and NET2 are both used for networking between ESSs. No distinction is made between these two ports.

### 5.7.2 EMS/LC Communication Wiring

CONN1 and CONN2 on the power distribution box house terminals for ATS communication, LC communication, and FSS external power supply wiring.

The positions of CONN1, CONN2, and EMS communication interface are shown as follows.

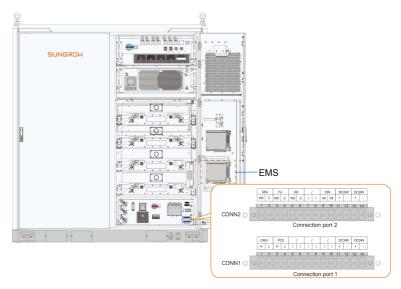


Figure 5-10 Communication Interfaces

Port Position Description

User Manual 5 Electrical Connection

	CONN1-1/2	CMU communication, reserved for maintenance	
	CONN1-3/4	Parallel communication between DC/AC power converter units	
	CONN1-5/6		
CONN1	CONN1-7/8	Reserved	
	CONN1-9/10		
	CONN1-11/12	Decembed for 24 V/de	
	CONN1-13/14	Reserved for 24 Vdc	
	CONN2-1/2	"Aerosol fire extinguishing agent spraying" dry contact output	
	CONN2-3/4	"FSS fire alarm" dry contact output	
	CONN2-5/6	"Combustible gas detector" dry contact output	
CONN2	CONN2-7/8	Reserved	
	CONN2-9/10	Reserved for DC/AC power converter unit's on/ off-grid switching input (connected to the ATS)	
	CONN2-11/12	Interface reserved for ATS power supply	
	CONN2-13/14	Interface for dehumidifier power supply	

### **EMS External Communication**

Port	Designation	Description
ETH1–ETH2	Ethernet port	Used for data exchange. It can be connected to the background master via devices such as a router or switch
ETH5	Ethernet port	Reserved for the master-standby feature
DI	DI port	Dry contact input
DO1-DO4	DO port	Relay output Relay specifications: 250 Vac/1 A, or 30 Vac/1 A
A1B1–A7B7	RS485 communication port	Provides 7 positions for RS485 wiring It can be connected to slave devices or background

|--|--|--|

### 5.8 Post-wiring Operation

### Prerequisite

Inspect the wiring thoroughly and carefully after all electrical connections are completed. In addition, perform the following operations:

- Confirm that there is no obstruction or blockage by foreign objects at the air inlet and outlet.
- · Seal the gaps around the cable inlet/outlet holes with fireproof and waterproof materials.

### WARNING

- · Moisture may get in if the equipment is not properly sealed.
- · Rodents may get in if the equipment is not properly sealed.

#### Lock the Cabinet Door

- **Step 1** Mount back the protective cover for the wiring area, by completing the steps for removal (see "Opening Cabinet Door") in reverse.
- Step 2 Lock the cabinet door and pull out the key.
  - --End

### NOTICE

After closing the cabinet door, make sure the sealing strip around the door does not curl.

# **6 Battery Connection**

### 6.1 Precautions

Always follow the safety instructions in this manual. In order to avoid personal injury and property damage that may occur during installation or operation, and extend the service life of this product, please carefully read all safety instructions.

Improper or incorrect use may result in:

- A threat to the life and personal safety of the operator or third parties;
- Damage to the energy storage system or other property of the operator or third party.



- The safety precautions in this manual do not cover all specifications to be followed, and all operations should be performed based on the site conditions.
- SUNGROW shall not be liable for any loss arising from failure to follow the safety precautions in the manual.

### **▲** WARNING

- While installing the device with hazardous voltage, follow relevant regulations and local installation safety guidelines.
- Please observe the regulations on the correct use of tools and personal protective equipment.
- All connections must be carried out with distinctive guidance. Any guess and ambiguous attempts must be prohibited.
- · Tools with an insulating protective coating must be used.
- Connecting cables should meet the voltage and current requirements.
- All connectors must be safe and reliable to avoid loosening or virtual contact. They must be corrosion-resistant, wear-resistant and shock-proof.
- All connections must comply with the requirements of relevant national standards to prevent arc discharge in any form.
- The connections of internal batteries must be equipped with anti-vibration and antiloosening devices. Temperature, voltage and current sensors must be connected safely and reliably, to prevent loosening, ageing and extrusion. All sensor cables must be free of metal exposure.
- · Any type of short circuit should be prevented in the connection process.
- · Operators must use this product with personal protective equipment.



6 Battery Connection User Manual


 All connections must be carried out with distinctive guidance. Any guess and ambiguous attempts must be prohibited.

- Key connections must be correct, reliable (without loosening) and in good contact, without short-circuits.
- · All the finished connections must be measured and confirmed one by one.
- All connections must not be in contact with the casing or other components or shortcircuited.
- If there are other uncertain factors, please consult the after-sales technicians of SUNGROW before any operation.

### 6.2 Cable Connection

#### **Tools**

56

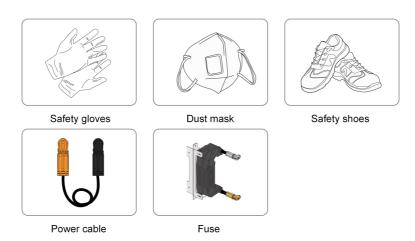

**Figure 6-1 Installation Tools** 

- **Step 1** Before connecting the power cable, put on insulated shoes and safety gloves. Before connecting the power cables between PACKs, disconnect the wiring between the PACK and the S/G first.
- **Step 2** Install the fuse. Open the cabinet door, and remove the sponge separators that hold the fuse plugs.

User Manual 6 Battery Connection

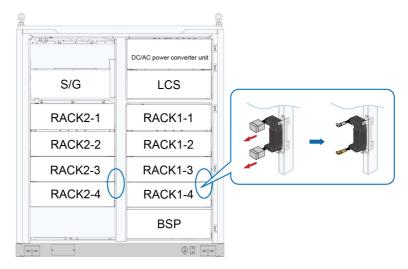


Figure 6-2 Fuse Location

Step 3 Insert the plugs that come with the fuse into the PACK bases properly.

 


Figure 6-3 Insert Fuse Plugs into PACK Bases

### **M** WARNING

Once the aviation plug is connected in place, you will hear a "click". Ensure that the connection is secure.

 Insert the positive aviation plug into the designated positive terminal on the PACK base, and the negative plug into the designated negative terminal on the base. Orange indicates positive, and black indicates negative. Once the aviation plug is connected in place, you will hear a "click".



- When connecting the power cables, you can adjust the position of the fuse properly.
- **Step 4** Connect the power cables between the PCAKs. The positive connector of the power cable between PACKs is secured on the RACK, and the negative connector is secured on the side bracket with a quick-connect clip and cable tie.

### WARNING

Once the aviation plug is connected in place, you will hear a "click". Ensure that the connection is secure.

6 Battery Connection User Manual

### NOTICE

When connecting the power cables between the PACKs, remove the negative connector of the power cable from the quick-connect clip on the side bracket, and then insert it into the designated negative terminal on the base.

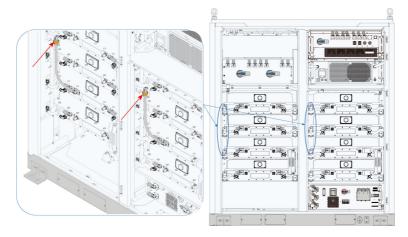


Figure 6-4 Quick-connect Clip

- a. Connect the BAT- of RACK1-1 to the BAT+ of RACK1-2.
- **b.** Connect the BAT- of RACK1-2 to the BAT+ of RACK1-3.
- c. Connect the BAT- of RACK2-1 to the BAT+ of RACK2-2.
- d. Connect the BAT- of RACK2-2 to the BAT+ of RACK2-3.

**Step 5** Connect the power cables between the PACK and the S/G.

- a. Connect the BAT+ of RACK1-1 to the BAT1+ of the S/G.
- b. Connect the BAT- of RACK1-4 to the BAT1- of the S/G.
- c. Connect the BAT+ of RACK2-1 to the BAT2+ of the S/G.
- d. Connect the BAT- of RACK2-4 to the BAT2- of the S/G.

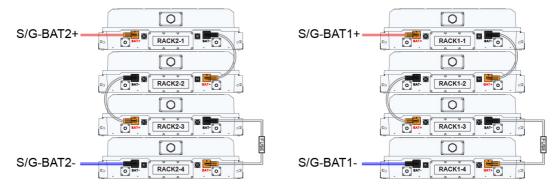


Figure 6-5 PACK Wiring Diagram

User Manual 6 Battery Connection

## **M** WARNING

Once the aviation plug is connected in place, you will hear a "click". Ensure that the connection is secure.

--End



# 7 Powering up and Shutdown

### 7.1 Powering up

### **WARNING**

• The equipment can only be put into operation after confirmation by a professional and approval of the local energy department.

### **▲** WARNING

• For equipment that has a long shutdown time, inspect it thoroughly and carefully and make sure all the indicators meet the relevant requirements before powering up.

### 7.1.1 Inspection Before Powering up

Before powering up the equipment, check the following items carefully.

- Check whether the wiring is correct.
- Check whether the protective covers inside the equipment are installed firmly.
- · Check whether the emergency stop button is released.
- · Check and ensure that there is no grounding fault.
- Check whether the AC and DC voltages meet startup conditions and ensure that there
  is no over-voltage with a multimeter.
- · Check and ensure that no tools or components are left inside the equipment.
- · Check all air inlets and outlets for blockage.
- If the equipment has been stored for more than six months, the top radiator fan should be checked for proper rotation, noise or stalling before powering up.

#### 7.1.2 Power-on Procedure

Inspect the equipment thoroughly before powering it on. The equipment can only be powered on after all the inspection items are confirmed to meet the requirements.

### Prerequisite

### **NOTICE**

Before the ESS is powered on for the first time, disconnect the red actuation cable of the aerosol fire extinguishing equipment to prevent accidental activation. The disconnection point is inside the junction box of its accessories. Reconnect the actuation cable once the FSS enters normal operation.

- The power and communication wiring of the ESS have been completed.
- The outdoor temperature is in the range of -30 °C to 50 °C.



It is not recommended to power on the equipment at temperatures below -30 °C. If the temperature is too low, it will take 24 consecutive hours or more for the system to heat the cells. During this period, the system cannot operate normally.

#### Step 1 Power on the ESS.

- a. Turn on the power supply switch of the S/G (DC SWITCH1-2).
- b. Turn on the switch on the panel of the DC/AC power converter unit: Set the DC load switch of the DC/AC power converter unit to "ON". Verify that the emergency stop button has been reset.
- c. Turn on the QF1 (AC main switch) on the panel to power the AC side of the system.
- d. Turn on the Q1 (AC auxiliary switch) on the panel to power the auxiliary power supply.
- **e.** Turn on the Q2 (UPS switch) on the panel, and press the power button on the UPS. The system's auxiliary power supply will start working (devices including the switch, LC, and fans are all powered on).
- Step 2 Start up the system via the control software.

#### NOTICE

If the ESS is equipped with a liquid cooling unit, check the status of the circuit breakers inside the liquid cooling unit. Close the circuit breaker that has not been closed.

--End

### 7.2 Shutdown

#### 7.2.1 Planned Shutdown

Planned shutdown refers to an interruption to the equipment operation that is scheduled in advance for overhaul, test, or maintenance.

### **Prerequisite**

Shut down the system via the control software, and switch off the battery relay (in case of an emergency, you can press the emergency stop button on the ESS).

- **Step 1** Preparation for powering off: Shut down the system via the control software (in case of an emergency, you can press the emergency stop button on the cabinet).
- Step 2 Power off the ESS.
  - a. Turn off the UPS, and turn off the Q2 (UPS switch) on the panel.
  - **b.** Turn off the Q1 (AC auxiliary switch) on the panel.
  - c. Turn off the QF1 (AC main switch) on the panel.
  - d. Set the DC load switch of the DC/AC power converter unit to "OFF".

### **A** DANGER

Before working on the AC wiring terminals, be sure to turn off the upstream switches of the ESS first.

- e. Turn off the power supply switch of the S/G (DC SWITCH1-2).
- --End

Proceed with the electricity test after the system self-discharge is completed.

### 7.2.2 Emergency Shutdown

Contact the local fire department in case of an emergency.

# 8 Fire Suppression



The equipment has an internal automatic fire suppression system. Do not flip
the fire suppression switch unless an emergency occurs.

### 8.1 General Rules

Always comply with the fire laws and regulations of the country/region where the project is located.

Perform regular inspection and maintenance on the fire suppression system regularly to ensure it can function properly.

#### NOTICE

If an operation and management personnel receives an ESS alarm or fault signal on-site, via the software, or from the plant-level FACP, while ensuring safety, request qualified firefighting personnel to conduct an on-site inspection and then manually clear the alarm or fault.

### 8.2 Fire Suppression System

The fire suppression system (FSS) of the ESS is primarily designed for early fire detection and fire extinguishing. It consists of three subsystems: a detection and alarm system, a fire extinguishing system, and a backup protection system. The FSS can function independently, without interfering with each other.

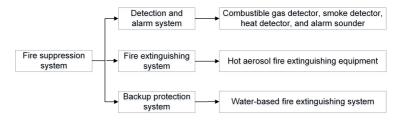


图 8-1 FSS Composition

### 注意

To ensure its accuracy, the combustible gas detector must be tested for functionality every six months. In case the detector fails the test, investigate the cause, and calibrate the detector if necessary.

8 Fire Suppression User Manual

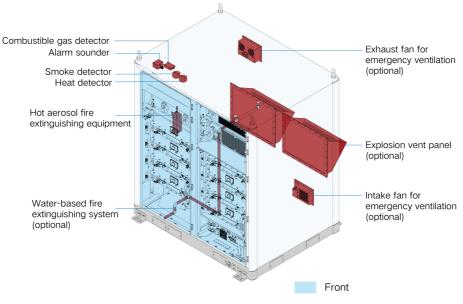


图 8-2 FSS Equipment

### 8.3 Detection and Alarm System

The detection and alarm system is able to discover fires early in their development and thus helps to reduce the risk of fire to the minimum.

Each ESS is equipped with a fire detection and alarm system consisting of a combustible gas detector, a smoke detector, a heat detector, and an alarm sunder.

- The combustible gas detector can detect the concentration of combustible gases
  produced during thermal runaway. When the concentration of combustible gases inside
  the battery compartment reaches the preset alarm threshold, the detector will trigger an
  alarm and upload the alarm signal to the LC.
- The smoke detector assesses the smoke concentration based on the scattering of light in smoke. When the smoke concentration in the battery compartment reaches the preset threshold (0.15 dB/m), the smoke detector will trigger an alarm and upload the alarm signal to the LC.
- The heat detector senses the changes of temperature in the battery compartment. If the
  temperature in the battery compartment reaches the preset threshold (54 °C), the heat
  detector will trigger an alarm and upload the alarm signal to the LC.
- In addition, if the LC also receives a cell overtemperature fault signal, the LC will shut down the current ESS.
- When both the smoke detector and heat detector trigger an alarm, under their linkage control, the alarm sounder will trigger an acoustic alarm to alert on-site personnel to the abnormal conditions in the equipment.

User Manual 8 Fire Suppression

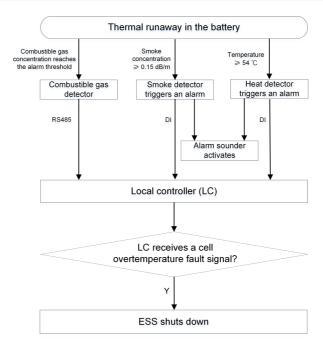


Figure 8-3 Control Logic of the Detection and Alarm System

## 8.4 Fire Extinguishing System

Each ESS is equipped with a hot aerosol fire extinguishing system. Its hot aerosol fire extinguishing equipment consists of an aerosol generator, a feedback element, and an enclosure

When both the smoke detector and heat detector trigger an alarm, under their linkage control, the aerosol generator will be activated, releasing smoke-like fire extinguishing agent. The fire extinguishing agent will then be discharged into the battery compartment through the nozzle on the enclosure to extinguish the fire. After the fire extinguishing agent is released, the feedback element will send a fire extinguishing agent released signal to the LC. In addition, if the LC also receives a cell overtemperature fault signal, the LC will shut down the current ESS.

## NOTICE

When both the smoke and heat detector trigger an alarm, triggered by the linkage control mechanism, the aerosol fire extinguishing agent will be discharged. Therefore, before conducting tests, disconnect the activation line of the aerosol fire extinguishing system to prevent accidental activation.

8 Fire Suppression User Manual

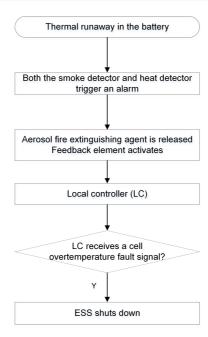


Figure 8-4 Control Logic of the Fire Extinguishing System

## 8.5 Backup Protection System (Optional)

In addition to the fire extinguishing system, the ESS also has a backup protection system, in case the fire keeps spreading even after the fire extinguishing system has activated.

In case the fire keeps spreading after the fire extinguishing system activates, the customer can activate the backup protection system after the ESS is powered off to extinguish the fire. The backup protection system consists of the sprinkler, water piping system, and reserved interface (pipe connector).

- When the temperature around the sprinkler reaches 93 °C, the glass bulb inside bursts, activating the sprinkler. Water then flows through the external and internal piping into the battery compartment, immersing the PACKs, to cool the equipment down and extinguish the fire.
- The reserved interface has a DN25 pipe connector. The external piping system shall be
  designed and installed by the customer separately and properly connected to the
  reserved interface on the ESS.

The external piping system can be designed according to the actual situation at the project site. Generally, there are two options: manual fire extinguishing and automatic fire extinguishing.

Manual: Suitable for scenarios where fire trucks or other movable equipment are
available at the site. In this scenario, set up a water supply piping system at the site in
advance, with one side connected to the reserved pipe connector of the ESS and the
other side to the fire truck or other movable equipment. In case of a fire, people need to
manually let the water in to extinguish the flames.

User Manual 8 Fire Suppression

Automatic: Suitable for scenarios where fire water ponds are available at the site. In this
scenario, the water supply piping system is connected to the reserved pipe connector of
the ESS on one side and to the pond on the other side. In case of a fire, water from the
pond will automatically flow into the piping system for fire extinguishing. A valve must be
installed on the pipe connected to the reserved connector on the ESS. Ensure that no
water is present in the pipes inside the ESS under normal operating conditions.

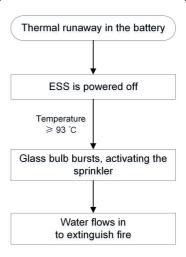


Figure 8-5 Control Logic of the Backup Protection System

# 9 Troubleshooting

In case of anything abnormal with the ESS, it is suggested to perform troubleshooting by referring to the troubleshooting methods mentioned in the LC300 user manual first.

For more information, refer to the below document: LC300 User Manual.

If the problem persists or there are any other questions, please contact SUNGROW. It would be helpful if you could provide the below information:

- Model and S/N of the ESS and its internal devices.
- · Fault information and a brief description of the fault.
- · A photo of the fault, if possible.



If the Web user interface crashes when connecting to the LC, you need to log in again.

If switches connected hand-in-hand (cascaded) fail to communicate with each other properly, follow the troubleshooting instructions below:

- 1. Check that the cables are in good condition, without damage or poor contact.
- 2. Check the power supply.
  - · Check that all switches are powered properly.
  - Check that the power indicator is in a normal state.

## 10 Routine Maintenance

## 10.1 Precautions Before Maintenance

## **MARNING**

- Do not open the door to maintain the device in rainy, humid or windy days.
   SUNGROW shall not be held liable for any damage caused by violation of the warning.
- Avoid opening the container door when the humidity is high in rain, snow or fog, and make sure that the seals around the container door do not curl when the door is closed.

## **M** WARNING

- To avoid electric shock, do not perform any other maintenance operations beyond this manual.
- If necessary, contact SUNGROW customer service for maintenance.

#### NOTICE

In the event of heavy snowfall at the project site, please clear the snow from the top of the equipment and the surrounding area in a timely manner.



In fair weather, it is recommended to open the container door to dehumidify the equipment.

## 10.2 Container Maintenance

## 10.2.1 Appearance Repair



Check if the protective paint sprayed on the enclosure of the product fell off or peeled off. If so, repair it timely.

Spray a special protective paint to the exterior of the product every 5 years.

#### Solutions

Select different repair solutions based on the damage conditions.

Conditions	Solutions
Surface dirt that can be wiped off	10.2.1.1 Detergent Cleaning
Finish paint falls off, and the primer is intact	10.2.1.2 Finish Paint Repair
Primer is damaged, and the base material is exposed	10.2.1.3 Double-Layer Paint Repair

## 10.2.1.1 Detergent Cleaning

## Prerequisite

For dust or stains on the product surface, you can wipe them off using water and alcohol.

## **Prepared by Users**

**Table 10-1 Cleaning Tools** 

No.	Item
1	Cleaning cloth
2	Water
3	Alcohol or other non-corrosive detergents

- **Step 1** Wet the cleaning cloth (or other scrubbing tools) with water, and scrub the dirty parts on the surface.
- **Step 2** If the dirt cannot be cleaned with water, scrub with 97% alcohol till the surface is acceptable. (Or try to use non-corrosive detergents that are generally used locally.)



--End

## 10.2.1.2 Finish Paint Repair

#### **Prerequisite**

For minor scratches or surface paint chalking, where the finish paint has peeled off, but the base material is not exposed, finish paint repair is needed to restore the product appearance.

## **Finish Paint Selection and Mixing**

**Table 10-2 Finish Paint Selection and Mixing** 

Brand and Model	Chemical Component	Mixing Ratio	Thinner	Drying Time (Minimum)
Jotun Finish Coat Hardtop XP or Hardtop XPL	Two-component chemically cured aliphatic	Main component : Hardener= 10:1 (Volume Ratio)	Jotun Thinner No.10	5°C 24h 10°C 12h 23°C 5h 40°C 3h
AkzoNobel Finish Paint Interthane 990	Two-component acrylic polyurethane paint	Main component : Hardener= 6:1 (Volume Ratio)	Internationa I GTA056	5°C 24h 25°C 6h 35°C 4h

- · Confirm with SUNGROW before using paints of other brands or models.
- When using a two-component paint, first thoroughly agitate each component individually, and then mix them in the specified proportions for stirring.
  - Add the thinner only after the paint and hardener have been mixed.
  - · Do not use paint that has exceeded its shelf life.

## **Prepared by Users**

## **Table 10-3 Cleaning Tools**

No.	Item
1	400 mesh/600 abrasive paper
2	Cleaning cloth
3	Alcohol
4	Brush
5	Finish paint
6	Film thickness meter

## **Environment Requirements**

Ambient temperature: 5°C–40°C

Base material temperature: 5°C–60°C

• Relative humidity: 10%-85%RH

#### **Repair Steps**

**Step 1** Polish the paint surface with blistering or scratches with an abrasive paper to expose the gray primer. Use a film thickness meter to measure the primer thickness, which must be at least 150μm.

Step 2 Use a clean brush to remove any residue from the surface.

Step 3 Use a piece of clean cloth dipped in alcohol or detergent to remove the surface powder.







Step 4 Repair the finish paint.

a. Prepare the finish paint with the same color as the appearance.



- **b.** Mix the finish paint according to the paint model and the requirements of Table 10-2 Finish Paint Selection and Mixing.
- c. Apply the finish paint using a brush in a crosshatch pattern. Once the paint fully dried, measure the film thickness using a film thickness meter. Ensure that the single coat thickness falls between 50μm–100μm.



**d.** When applying multiple layers of paint, wait for each layer to dry completely before applying the next. The total thickness of the primer and finish paint must be at least 240μm.

**Step 5** Inspect the paint to ensure it has a uniform color, smooth transitions, and meets the required film thickness.

--End

## 10.2.1.3 Double-Layer Paint Repair

## Prerequisite

If the rusted area is large, or there are deep scratches or dents that expose the base material, perform a double-layer paint repair, including both a primer and a finish paint.

## **Primer and Finish Paint Selection and Mixing**

Table 10-4 Primer and Finish Paint Selection and Mixing

Brand and model	Chemical Component	Mixing Ratio	Thinner	Drying Time (Minimum)
Jotun Primer Jotamasti c 90	Two-component epoxy paint	Main component : Hardener= 3.5:1 (Volume Ratio)	Jotun Thinner No.17	5°C 30h 10°C 10h 23°C 3h 40°C 1.5h
AkzoNobe I Primer Interseal 670HS	Two-component epoxy paint	Main component : Hardener= 5.67:1 (Volume Ratio)	Internation al GTA220	5°C 36h 10°C 16h 25°C 10h 40°C 4h
Jotun Finish Coat	Two-component chemically cured aliphatic	Main component : Hardener= 10:1 (Volume Ratio)	Jotun Thinner No.10	5°C 24h 10°C 12h 23°C 5h 40°C 3h

Brand and model	Chemical Component	Mixing Ratio	Thinner	Drying Time (Minimum)
Hardtop XP or Hardtop XPL				
AkzoNobe I Finish Paint Interthane 990	Two-component acrylic polyurethane paint	Main component : Hardener= 6:1 (Volume Ratio)	Internation al GTA056	5°C 24h 25°C 6h 35°C 4h



- Use primers and finish paints from the same manufacturer.
- Confirm with SUNGROW before using any paint from a different manufacturer.



- When using a two-component paint, first thoroughly agitate each component individually, and then mix them in the specified proportions for stirring.
- Add the thinner only after the paint and hardener have been mixed.
- Do not use paint that has exceeded its shelf life.

## Prepared by users

## **Table 10-5 Cleaning Tools**

No.	Item
1	400 mesh/600 mesh abrasive paper
2	Cleaning cloth
3	Alcohol
4	Brushes with different sizes
5	Grinder (conical and cylindrical polishing heads)
6	Wall putty
7	Finish coat
8	Primer
9	Film thickness meter

## **Environment Requirements**

Ambient temperature: 5°C–40°C

Base material temperature: 5°C–60°C
Relative humidity: 10%RH–85%RH

## **Repair Steps**

**Step 1** Use a grinder or abrasive paper to smooth uneven areas on the surface, achieving a smooth finish with a metallic luster. Ensure a uniform transition from rusted areas to intact coating.




Uneven areas refer to burrs, metal fragments, slag, gaps, and sharp edges on the product.

- **Step 2** For deeper defects such as scratches or dents, repair them with wall putty to ensure a flat surface.
- Step 3 Use a clean brush to remove any residue from the surface.
- **Step 4** Use a piece of clean cloth dipped in alcohol to remove the surface powder.



Step 5 Repair the primer.

a. Prepare the primer with the same color as the appearance.

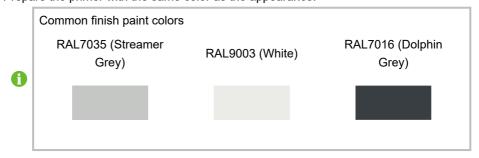

**b.** Mix the primer according to the paint model and the requirements of Table 10-4 Primer and Finish Paint Selection and Mixing.

- **c.** Apply a primer with a small brush, and use a film thickness meter to ensure the coating thickness in corners and gaps is between 70µm–80µm.
- **d.** After the first layer dries, apply another layer of primer using a brush in a crosshatch pattern. Once it is dry, check that the dry film thickness is within 100µm–300µm.
- Step 6 Refer to 10.2.1.2 Finish Paint Repair for finish paint repair.
- **Step 7** Inspect the paint to ensure it has a uniform color, smooth transitions, and meets the required film thickness.

#### --End

A

When using spray paint, follow these steps:

- **1.** Carefully cover the area outside the damaged spot (extending 800mm outward) using masking paper.
- 2. Spray the exposed area with the paint. After the paint dries, check that the dry film thickness is within the range of 100μm–300μm.

## 10.2.2 Checking Door Locks and Hinges

Check whether the door locks and hinges of the container can be used normally after cleaning. Lubricate the door lock holes and hinges properly when necessary.

## 10.2.3 Checking Sealing Strips

If the sealing strip is in good condition, it can effectively prevent water seepage inside the container. Therefore, carefully check the sealing strip and replace it immediately if there is any damage.

## 10.3 Battery Maintenance

#### 10.3.1 Maintenance Precautions

## **A** WARNING

Do not allow the product to remain in a low voltage or low SOC condition for a long time. Capacity loss resulting from any of the following conditions is not covered by warranty:

- The discharging cell voltage remains below 2.7 V for 120 consecutive hours.
- The SOC of any RACK remains at 0% for 120 consecutive hours.
- The discharging cell voltage is below 2 V.

## **WARNING**

Cell overvoltage and undervoltage fault/alarm (For details, see Communication Protocol > LC300 Info-3x table > CMU fault word/CMU alarm word).

• Fault: "Cell overvoltage fault", "Cell undervoltage fault", "Total voltage overvoltage fault", "Total voltage undervoltage fault".

• Alarm: "Cell overvoltage alarm", "Cell undervoltage alarm", "Total voltage overvoltage alarm", "Total voltage undervoltage alarm".

End users must prioritize resolving the above faults and alarms reported by the SUNGROW local controller. The relevant fault or alarm information will be shown on the user interface. In addition, users shall contact SUNGROW to resolve the problems promptly to prevent the battery from overdischarging or overcharging, which may void the warranty.

#### NOTICE

- To avoid voiding the warranty, if a cell undervoltage or overvoltage fault occurs, users must contact SUNGROW's local team within 24 hours and follow their instructions.
- The active recharge function is enabled by default at the factory (if the system supports this function). If the SOC is too low, the system will automatically charge the batteries at a low current, until the SOC reaches the safe threshold (configurable).
   SUNGROW recommends keeping this function enabled to minimize the risk of voiding the warranty due to battery undervoltage.

## NOTICE

- If the system remains inactive for 7 days or longer, it is suggested to raise the SOC lower limit protection value to above 10%. Besides, regularly monitor the system's SOC to prevent overdischarge, which may void the warranty.
- During maintenance or shutdown, if any RACK's SOC falls to 0%, charge it to at least 15% within 120 hours.
- During operation, if any RACK's SOC falls to 0%, charge it to at least 5% within 2 hours. Alternatively, when the SOC reaches 0%, switch the system to recharging mode via the upper computer EMS.
- If the system is stored without operation for six months or more, it must undergo at least one full charge to activate the batteries before being used for the first time.

The user needs to calibrate the SOC when the battery system is in one of the following conditions during operation.

- During operation, if the SOC does not reach 1%–5% when discharging, and does not reach 97%–100% when charging, it is recommended that a SOC calibration be performed once every 1 month.
- During operation, when the SOC reaches 1%–5% when discharging, or the SOC reaches 97%–100% when charging, and the resting time is <2h, it is recommended that a SOC calibration be performed once every 1 month.



During operation, no additional calibration is required when the SOC reaches 1%–5% when discharging or 97%–100% when charging, and the resting time is ≥ 2h.

 A calibration is recommended for major changes in operating conditions, such as from energy shifting to frequency regulation application.

## Steps to manually perform SOC calibration

- 1. Set SOC protection lower limit to 1%–5% and upper limit to 97%–100%.
- **2.** Discharge the system until the SOC reaches the lower limit, and then let the system rest for 2 h without changing the power command.
- **3.** Charge the system until the SOC reaches the upper limit, and then let the system rest for 2 h without changing the power command.
- **4.** SOC calibration is complete. The system can be put back into operation.

For safe and effective maintenance of the system, maintenance personnel must carefully read and observe the following safety requirements.

- 1. Maintenance personnel must hold an electrician's license issued by the local safety supervision authority and successfully complete professional training before operation.
- 2. Observe related safety precautions, use necessary tools, and wear personal protective equipment.
- 3. Do not wear jewelry or metal accessories such as watches.
- **4.** Do not touch the positive and negative high-voltage terminals of the ESS with hands at the same time.
- 5. Turn off all HV and LV switches before maintaining the ESS.
- 6. Do not clean the ESS with water directly. Use a vacuum cleaner if necessary.
- **7.** Connect and disconnect cables by following the standard operation procedure. Do not connect or disconnect any cables forcefully or brutally.
- **8.** Put away the tools and materials in time after maintenance. Check that no metal objects are left inside or on top of the equipment.
- **9.** If there is any question about the operation and maintenance of the equipment, please contact SUNGROW Customer Service. Unauthorized operation is prohibited.

## 10.3.2 Maintenance

- PACK operating temperature: The working temperature should be kept between -30°C-50°C. The temperature charging and discharging should be 15°C-30°C and typically 25°C.
- 2. The RACK should not be charged or discharged with high magnifying power. The continuous charging and discharging current of a single rack should not exceed the rated current.
- **3.** When the energy storage system is not used in a long time, it should be charged once every six months, until its SOC is 30%–40%.

**4.** When the system is used after long-term storage, it should be fully charged at least once to restore the best performance of the battery.

- **5.** To perform maintenance on the PACK on the top layer, first remove the nearby smoke detector, heat detector, and any other components that may hinder smooth removal of the PACK. Ensure that no components are damaged during the removal process.
- 6. Regularly check whether the air duct of the cooling system is blocked and clean the system. In particular, clean the air inlet and outlet of the fan and use a vacuum cleaner if necessary, to maintain free air circulation inside the cabinet. Before dust removal, the power supply must be cut off. It is forbidden to rinse the system with water.
- 7. Regularly check whether the fastening bolts of the high-voltage cables and connecting busbars of the energy storage system are loose, whether the contacts are in good conditions, and whether the terminal surfaces are severely corroded or oxidized.
- **8.** Regularly check the protective covers of high-voltage positive and negative electrodes of the PACK for ageing, damage and missing.
- **9.** Regularly check cables for loosening, ageing, damage and fracture and inspect whether the insulation is in good conditions.
- **10.** Regularly check the battery container for pungent odor and high-voltage connections for burning odor.
- **11.** Regularly check whether the voltage, temperature and other data of the monitoring upper computer are correct and whether there are fault alarms in the alarm column.
- **12.** Regularly check whether the status and alarm indicators of the energy storage system are in good conditions and whether they work properly.
- **13.** Regularly check whether the emergency stop button of the energy storage system can be used, in order to quickly shut down the system in an emergency.
- **14.** Regularly check whether the fire extinguishers are in good conditions and within the validity period.
- 15. Never use different types of battery modules in series or parallel.
- 16. PACK A and PACK B are prohibited from replacing each other.

## **M** WARNING

- The battery is potentially dangerous, so appropriate protective measures must be taken during operation and maintenance!
- · Incorrect operation may cause severe personal injury and property damage!
- Use the appropriate tools and protective equipment during battery operation.
- Battery maintenance must be performed by those who have battery expertise and received safety training.

## 10.4 Coolant Replacement

Object	Standard	Period	Tools
Coolan t	<ol> <li>There are obvious impurities in antifreeze;</li> <li>Antifreeze is significantly darker in color.</li> </ol>	5–6 years	Water pump, hose, hose clamp, slotted screwdriver Note: Please contact Sungrow Customer Service to replace hardware facilities

## **MARNING**

Normally coolant is not a health hazard, excessive exposure may cause irritation to the eyes, skin and breathing.

## NOTICE

- The coolant in the refill tank must not exceed the "H" line.
- The brand of coolant to be replaced is limited to Great Wall and Acwell, and it is recommended to use the same brand of coolant. If you choose to mix Great Wall and Acwell coolants, the mixing ratio of different coolants is limited to 9:1.

## Personal protection

Wear personal protective equipment (PPE) when changing coolant. PPE should comply with relevant national standards, including but not limited to the following protective equipment.

Protective parts	Protective equipment
Respiratory protection	Under normal conditions of use, it is generally not necessary to wear respiratory protection equipment. If the engineering control facility does not maintain the air concentration at a level sufficient to protect the health of personnel, choose respiratory protection equipment suitable for the conditions of use and in compliance with relevant legal requirements. If you need to wear a safety filter mask, please choose a suitable mask and filter combination. Choose a filter suitable for a mixture of particulate/organic gas and vapor [boiling point >65 °C (149 °F)].
Hands protection	Use oil-resistant, chemical-resistant protective gloves.
Eyes protection	Please use protective goggles.

Protective parts	Protective equipment
Skin and body protection	Use non-permeable protective clothing and safety shoes.

## **Disposal considerations**

Waste types	Disposal measures
Coolant	Discharges are made in accordance with local regulations and are not disposed of haphazardly.
Rubbish remnant	Separate and recycle, and if it meets the relevant regulations, it can be burned or reused.
Containers	Dispose of in accordance with all applicable local and national regulations. Use recovery/recycling where feasible, otherwise incineration is the recommended method of disposal. Empty containers may contain hazardous residues. Do not cut, puncture or weld on or near to the container. Labels should not be removed from containers until they have been cleaned. Contaminated containers must not be treated as household waste. Containers should be cleaned by appropriate methods and then re-used or disposed of by landfill or incineration as appropriate. Do not incinerate closed containers.

#### Accidental release measures

When a coolant leak occurs, refer to the following measures to deal with it.

- Immediately contact a professional to have uninvolved persons evacuated quickly to safety.
- Cut off the source of the spill as far as possible and prevent it from entering spaces such as sewers, drains and bodies of water.
- When cleaning up spilled liquids, wear protective equipment to protect your body from contact with the spilled or released material.
- Use sand, mud or other materials that can be used as barriers to set up barriers to
  prevent diffusion. Recover liquid directly or store in absorbent. Clean the contaminated
  area with detergent, water and a hard broom. Put the collected liquid in a disposable
  container.

## First aid measures

Contact method	Measures
Inhalation	Move to fresh air. If breathing has stopped, give artificial respiration first aid. Seek medical attention.

Contact method	Measures
Skin contact	Take off contaminated clothing. Rinse the skin thoroughly with soap and water. Seek medical attention if skin inflammation or rash occurs.
Eyes contact	Flush eyes with plenty of water for at least 15 minutes. Seek medical attention.
Ingestion	If ingested, but conscious, water or milk to drink and actively seek medical help, do not induce vomiting unless instructed by healthcare patients. If you cannot get help from a doctor, please send the patient and the container and label to the nearest medical emergency center or hospital. Do not give any food to unconscious patients.

## 10.5 Post-maintenance Inspection

After maintenance work is completed, perform the following checks:

- Do not leave screws, washers, or other metal parts inside the cabinet during maintenance. Otherwise, the equipment may be damaged.
- Make sure all screws are tightened in place.
- In most cases, the protective covers inside the equipment need to be removed before
  the maintenance work. After completing the maintenance work, mount back all
  protective covers in their original positions, and make sure the screws are all tightened
  properly.
- To prevent collisions between the door lock tab and the door frame hinge, ensure that
  the angle between the door handle and the vertical direction is at least 100° when
  locking the door.
- Ensure the seal strip around the door does not curl when the door is closed.

# 11 Appendix

## 11.1 System Parameters

Product Model	ST510CS-4H	
Battery Data		
Cell type	LFP	
System battery configuration	256S2P	
Rated battery capacity	514 kWh	
Battery voltage range	691.2 V – 934.4 V	
Depth of charge/discharge	0% – 100%	
DC/AC Power Converter Unit Data (On-Grid)		
Rated power	125 kW	
Rated grid voltage	400 V	
Grid voltage range	340 V – 440 V	
Rated grid frequency	50 Hz / 60 Hz	
Grid frequency range	45 Hz – 55 Hz / 55 Hz – 65 Hz	
Current THD	≤ 3% (at rated power)	
Current DC component	≤ 0.5% (at rated power)	
DC/AC Power Converter Unit Data (Off-grid)		
Rated AC voltage	400 V	
Rated AC frequency	50 Hz / 60 Hz	
Unbalanced load capacity	100%	
System Data		
*Dimensions (width * height * depth)	2152 * 2470 * 1610 mm	

11 Appendix User Manual

Product Model	ST510CS-4H		
*Weight	≤ 5300 kg		
IP rating (battery compartment)	IP55		
Ambient humidity	0% – 100%		
Ambient temperature	-30 °C to 50 °C (derate at > 45 °C)		
Max. altitude	3000 m		
Cooling method	Intelligent liquid cooling		
Communication interface	Ethernet		
Communication protocol	Modbus TCP		
Compliance	IEC 62619, IEC 63056, IEC 62040, IEC 62477, IEC 61000, IEC 62933, UN 38.3		

<sup>\*</sup>The technical data is for reference only. Please refer to the information on the nameplate of the product.

## 11.2 Abbreviations

Abbreviation	Definition		
В			
ВМ	Battery Module (PACK)		
ВС	Battery Cluster (RACK)		
вми	Battery Management Unit		
BCMU (CMU)	Battery Cluster Management Unit (CMU for short)		
BSMU (SMU)	Battery System Management Unit (SMU for short)		
BMS	Battery Management System		
BSC	Battery System Controller		
Battery Collection Panel. Battery DC inputs are combined the BCP's DC copper bar, and then connected to the DC/A power converter unit's DC side through the copper bar on other side of the BCP.			

User Manual 11 Appendix

Abbreviation	Definition	
BSP	Battery Power Supply Panel. It is used as an auxiliary power supply for components inside the battery, such as lighting, FSS, etc.	
D		
DC/DC	DC/DC Converter	
E		
ESS	Energy Storage System	
EMS	Energy Management System	
L		
LC	Local Controller	
S		
SCADA	Supervisory Control and Data Acquisition	
S/G	Switch Gear	
SOC	State Of Charge	
SOH	State Of Health	

## 11.3 Tightening Torques

To avoid poor contact caused by the loosening of copper cable lugs due to stress, and to prevent heat or even fire due to increased contact resistance, make sure to tighten the screws on the cable lugs at the recommended torques:

Bolt	Torque(N·m)	Bolt	Torque(N⋅m)
M3	0.7–1	M8	18–23
M4	1.8–2.4	M10	34–40
M5	4–4.8	M12	60–70
M6	7–8	M16	119–140

<sup>\*</sup>Torque values listed in the table are intended for the bolt and nut assembly, and do not apply to riveted nuts or riveted screws, etc. The torque to be adopted should depend on the actual situation.

11 Appendix User Manual

\*\*Secure the cable at a proper point to reduce the stress on the cable lug.

## 11.4 Quality Assurance

When product faults occur during the warranty period, SUNGROW will provide free service or replace the product with a new one.

#### **Evidence**

During the warranty period, the customer shall provide the product purchase invoice and date. In addition, the trademark on the product shall be undamaged and legible. Otherwise, SUNGROW has the right to refuse to honor the quality guarantee.

#### **Conditions**

- After replacement, unqualified products shall be processed by SUNGROW.
- The customer shall give SUNGROW a reasonable period to repair the faulty device.

#### **Exclusion of Liability**

In the following circumstances, SUNGROW has the right to refuse to honor the quality guarantee:

- The free warranty period for the whole machine/components has expired.
- · The device is damaged during transport.
- The device is incorrectly installed, refitted, or used.
- The device operates in harsh conditions beyond those described in this manual.
- The fault or damage is caused by installation, repairs, modification, or disassembly performed by a service provider or personnel not from SUNGROW.
- The fault or damage is caused by the use of non-standard or non-SUNGROW components or software.
- The installation and use range are beyond stipulations of relevant international standards.
- The damage is caused by unexpected natural factors.

For faulty products in any of above cases, if the customer requests maintenance, paid maintenance service may be provided based on the judgment of SUNGROW.



Product data such as product dimensions are subject to change without prior notice. The latest documentation from SUNGROW should take precedence in case of any deviation.

## 11.5 Contact Information

In case of questions about this product, please contact us. We need the following information to provide you the best assistance:

User Manual 11 Appendix

- Model of the device
- · Serial number of the device
- Fault code/name
- Brief description of the problem

For detailed contact information, please visit: https://en.SUNGROWpower.com/contactUS



# SUNGROW

阳光电源股份有限公司

网 址: www.sungrowpower.com

邮 编: 230088

公司地址:安徽省合肥市高新区习友路 1699 号生产地址:安徽省合肥市高新区长宁大道 608 号